




Dehumidifier

RECUSORB RLA-60LR

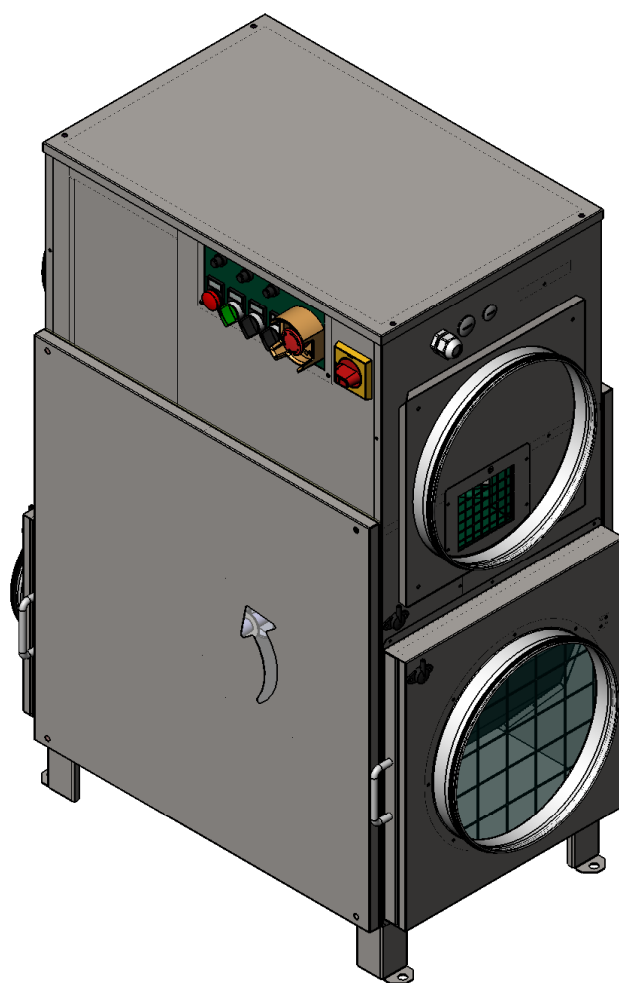

The product picture may differ from the actual product

Contents

1. Safety	7	8. Option & accessory	18
1.1 Aim of this document	7	8.1 Filter guard	18
1.2 Emphasised text.....	7	8.2 Rotation guard.....	18
1.3 Intended use.....	7	8.3 Frequency converter to fans	18
1.3.1 Hazardous operating conditions	7	8.4 Insulation.....	18
1.3.2 Responsibilities of the operator	7	8.5 Filter box.....	19
1.3.3 Minimising hazards	7	8.6 Energy saving.....	19
1.4 Safety	7	8.7 Electronic humidity controller and electronic humidistat .	19
1.5 Inspection of goods	7	19
1.6 Safety advice regarding transportation.....	7	8.8 AUTO/ECO VENT.....	19
1.7 Installation	7	8.9 PLC - C4	20
1.8 Electrical installation.....	8	9. Troubleshooting	21
1.9 Commissioning	8	9.1 Error codes.....	21
1.10 Operation	8	9.2 General troubleshooting.....	22
1.11 Maintenance.....	8	9.3 Capacity troubleshooting	22
1.12 Disposal/recycling.....	8	10. Maintenance	23
2. Introduction	9	10.1 Regular service interval.....	23
2.1 Type plate overview	9	10.2 Washing the rotor	23
2.2 Serial number structure	9	11. Technical data	24
2.3 Other unit information	9		
3. Product description	10		
3.1 Product overview.....	10		
3.2 Applications.....	10		
3.3 Principle of operation	10		
4. Installation	11		
4.1 Unit installation	11		
4.1.1 Fork lifting.....	11		
4.1.2 Transport.....	11		
4.1.3 Positioning	11		
4.2 General Duct work installation	12		
4.3 Humidistat/electronic controller installation	12		
4.4 Electrical connection	12		
4.4.1 Power supply.....	12		
4.4.2 Earth leakage circuit breaker	12		
4.4.3 Humidistat connections.....	13		
4.4.4 0-10VDC signal	13		
4.4.5 Remote control.....	13		
4.4.6 Potential-free signals	13		
5. Operation check & adjustment	14		
5.1 Pre-operation check	14		
5.2 Start-up test and adjustment.....	14		
6. Operating	15		
6.1 Control panel	15		
6.2 Start.....	15		
6.3 Stop.....	15		
6.4 Reset buttons & switches	15		
7. Functions	16		
7.1 Dehumidification function.....	16		
7.1.1 Automatic or Manual	16		
7.1.2 AUTO-VENT /AUTO ECO VENT or AUTO-OFF..	16		
.....	16		
7.1.3 Humidistat connection	16		
7.1.4 0-10VDC connection.....	17		
7.2 Remote control switch	17		
7.3 Temperature safety devices	17		

Appendix

1. Component list
2. Dimension
3. Harmful chemicals and solvents for rotors
4. CE-declaration

Electrical wiring diagram is stored in the document pocket, depending on the unit, inside or outside the electrical box. The electric diagram has a drawing number. This number should correspond to the sticker with a drawing number found inside the electric cabinet.

If applicable, separate users' manuals for components with separate controls are found in the document pocket.

Figures

FIGURE 1: Type plate.....	9
FIGURE 2: Serial number structure for a single-phase unit	9
FIGURE 3: Serial number structure for a three-phase unit.....	9
FIGURE 4: Product overview	10
FIGURE 5: Principle of operation & rotor	10
FIGURE 6: Forks in contact with both sides of the frame.....	11
FIGURE 7: Units with handles	11
FIGURE 8: Exercise caution when lifting and transport a unit	11
FIGURE 9: Installation of wet air out duct.....	12
FIGURE 10: Humidistat positioning.....	12
FIGURE 11: Control panel	15
FIGURE 12: Illustration of automatic and manual functions.....	16
FIGURE 13: Ventilation modes for automatic control	16
FIGURE 14: Electronic filter guard	18
FIGURE 15: Manometer - mechanical filter guard.....	18
FIGURE 16: Filter box - Add-on module.....	19
FIGURE 17: EH3 T2	19
FIGURE 18: EH4.....	19
FIGURE 19: Troubleshooting table and solution	21
FIGURE 20: General troubleshooting table and solution.....	22
FIGURE 21: Capacity troubleshooting and solution table.....	22
FIGURE 22: Service chart	23

1 SAFETY

1.1 AIM OF THIS DOCUMENT

This document accompanies delivery and is therefore an integral part of the equipment. It describes the machine's design and configuration at the time of delivery.

In the interest of safety, please study this document before installing or operating the equipment.

Instructions relating to safety, handling, operation and maintenance must be followed.

Non-compliance can result in serious personal injury or damage to the machinery and may invalidate manufacturers' liabilities and warranties.

This document includes guidance for:

- Installers
- Operators
- Maintenance staff

Please retain this document throughout the lifetime of the equipment.

1.2 EMPHASISED TEXT



Caution! Indicates hazards that could result in damage to the equipment.



Warning! Indicates "potentially" hazardous situations that could result in damage to the equipment, serious personal injury or death.



Danger! Indicates "imminently" hazardous situations that could result in damage to the equipment, serious personal injury or death.



Attention! Indicates important information or instructions that require special attention.

1.3 INTENDED USE

This equipment is specifically designed for atmospheric air drying. It is unsuitable for any other use. For further advice please contact a DST representative.

Unless specifically stated in this manual, the following applications are prohibited:

- conditioning of gases (other than air)
- conditioning of air contaminated with chemicals or aggressive elements
- conditioning of air containing flammable or explosive elements
- in rooms or air systems having a potentially explosive atmosphere (ATEX)
- conditioning of air at elevated pressures
- air entering the rotor that has not been properly filtered with at least G4 class
- compounds in the air that will possibly deteriorate the silica gel rotor - see appendix for detailed information

1.3.1 HAZARDOUS OPERATING CONDITIONS

Operation of the system is deemed to be hazardous if it is:

- not operated inside or is not protected within a weatherproof enclosure.
- not operated within the permitted operating parameters (see technical specifications)
- operated outside the scope of 'normal' use (see intended use)

1.3.2 RESPONSIBILITIES OF THE OPERATOR

It is the responsibility of the operator of the system to ensure that all personnel engaged in the installation, operation, maintenance and service of the equipment have read and understood the relevant sections of this manual.

For your own safety, wear the appropriate personal protective equipment (PPE).

1.3.3 MINIMISING HAZARDS

To ensure that risk to personnel is minimised:

- Ensure that all activities relating to this equipment are carried out by qualified and authorised staff only.
- Identify and prevent potential safety hazards in the environment.

To ensure a failure-free operation:

- Keep this manual ready to hand with the unit.
- Use the machine as intended only.
- Only use the machine if it is fully functional.
- Check the condition of the machine before using.
- Check the machine for operational efficiency at regular intervals.
- Carry out maintenance and testing at prescribed intervals.

1.4 SAFETY

This equipment conforms to the relevant European regulations and directives and is designed and manufactured to be safe and reliable in operation.

The continued safety and reliability of the supplied equipment is entirely dependent on its correct handling, installation, operation and maintenance.

1.5 INSPECTION OF GOODS

Check for transportation damage! Use this product only if you assess it as being undamaged and faultless. Any damage must be recorded by the forwarder at the time of delivery and reported to the supplier of the equipment at the earliest opportunity.

Please check the equipment carefully for damage upon receipt and after removal of all packaging.

1.6 SAFETY ADVICE REGARDING TRANSPORTATION



Warning! Only use tested and certified lifting equipment to offload and position the unit.



Warning! If a forklift is used to move the unit, please ensure the load is evenly balanced.



Warning! If lifting the unit or cassette on a pallet, ensure the unit is firmly secured to the pallet.



Warning! Evacuate and secure the danger area during lifting and positioning of the unit.

1.7 INSTALLATION



Attention! Installation, testing, commissioning and maintenance must be carried out by a qualified person or under the supervision of a qualified person. Wherever possible, all mechanical work must be carried out with the electrical supply switched off.

A qualified person (mechanical) is defined in this manual as:




- a mechanical technician or engineer qualified to service and maintain air conditioning plant and associated systems who
- has completed the appropriate health and safety training
- has read and is familiar with the contents of this manual
- is professionally competent to commission and service this type of equipment.




Caution! The air dryer is designed for internal installation. For external use it will require a weatherproof enclosure.



Caution! The air dryer must be installed on a horizontal plane.

-  **Attention!** The air ducts must be vibration-free and sizable enough to prevent pressure build-up when conveying the incoming and outgoing air from the unit.
-  **Attention!** The incoming and outgoing outlets on the machine are not designed to bear any weight from the air ducts system.
-  **Attention!** The wet air outlet duct must be insulated to prevent condensate and ice build-up in cold conditions.


1.8 ELECTRICAL INSTALLATION


-  **Attention!** Wherever possible, all electrical work must be carried out with the electric supply switched off. It is recommended that electrical isolators be locked in the off position. All electrical work must be carried out by a qualified person or under the supervision of a qualified person.


A qualified person (electrician) is defined in this manual as:


- an electrical technician or engineer qualified to service and maintain air conditioning plants
- has completed the appropriate health and safety training
- has read and is familiar with the contents of this manual.

-  **Danger!** If the unit control panel isolation switch is off, the incoming cable terminals may still be live!

-  **Danger!** If working on the unit's isolation switch, ensure that the electrical power is isolated and locked to prevent accidental resetting.

-  **Danger!** Electrical connections are to be made in accordance with local regulations.


-  **Attention!** Check that the incoming electrical supply conforms to the electrical wiring diagram and the manufacturer's type plate attached to the unit.

-  **Caution!!** Loose terminal connections! Due to vibration during transportation it is advised that electrical terminals be checked for security and retightened where necessary. The following connecting terminals in the electrical control cabinet should be checked periodically and retightened if necessary:

- connecting terminals in the main isolator switch
- connecting terminals in main components of the heater circuits
- connecting terminals in main components of the fan circuits


Periodically as defined in this manual means:

- during installation
- during maintenance


-  **Caution!** Parameters used in the electrical protection and alarm circuits must not be modified or adjusted. Factory (default) parameters are shown in the electrical wiring diagrams, technical data or parameter list.


-  **Warning!** This equipment will contain high voltage electrical components!


1.9 COMMISSIONING

-  **Attention!** Equipment fans can produce noise levels above 80 dB (A). Use ear protection if someone are near an operating machine for any length of time.

1.10 OPERATION


-  **Caution!** Use the normal shut-down procedure in the operating chapter. If switching the unit off in an EMERGENCY, the main isolator switch or emergency stop button may be used. However, residual heat from the heater elements will remain in the unit and this can result in damage to components close to the heater.


-  **Caution!** On no account should the unit be operated without air filters installed!


-  **Caution!** Do not expose the unit to an ambient temperature that exceeds 50 °C/122 °F (e.g inside a plant room) for a long period of time. This may damage the internal components!


-  **Caution!** Do not process air at a temperature higher than 40°C/104°F. This may damage the internal components!


1.11 MAINTENANCE


-  **Caution!** Defective electrical components and defective wiring must be replaced immediately. The equipment must not be operated until the defect has been repaired and the unit has been retested.


-  **Caution!** For maintenance purposes, use the normal shut-down procedure as described in the operating chapter and allow the system to cool down before attempting to access internal components.


-  **Danger!** To prevent unintentional restart, ensure that the main isolator switch is off and the power is isolated before servicing internal components.

-  **Attention!** Advise all operating and maintenance personnel of the automatic restart function if applicable.


-  **Attention!** Pay attention to accessibility requirements for maintenance and service purposes.


-  **Danger!** Only certified personnel are allowed to adjust, repair or modify the unit's refrigerant system. Contact a DST representative for any questions (Econosorb & Frigosorb only).


-  **Caution!** The operation of all electrical safety devices is to be checked at commissioning and during service/maintenance. Under no circumstances are these devices to be deactivated (e.g., during adjustment or bridging).

-  **Caution!** Do not expose the unit to water jets during the washing-down procedure!

-  **Caution!** Do not wash the rotor!

-  **Warning!** Allow the fans to come to a complete stop and the unit to be isolated from the electrical supply before removing any panels!

-  **Warning!** The unit is equipped with a heating element. Do not touch the equipment whilst it is hot. Allow the unit to cool for at least **30 minutes** before any service or maintenance is performed.

-  **Danger!** Manually isolate the unit from the electrical supply by turning the main isolator to "OFF" and secure it with a lock pad before conducting any type of service and maintenance work on the unit

1.12 DISPOSAL/RECYCLING

When the unit is no longer in use, dismantle the unit and recycle the components according to local regulations. Contact a DST representative if you have any questions.

2 INTRODUCTION

2.1 TYPE PLATE OVERVIEW

The manufactured unit is identified by a type plate. The type plate is positioned on front or the right side of the unit. The details on the type plate are set out as follows:

1. Model designation
2. Serial number
3. Electrical supply information
4. Regeneration heater power

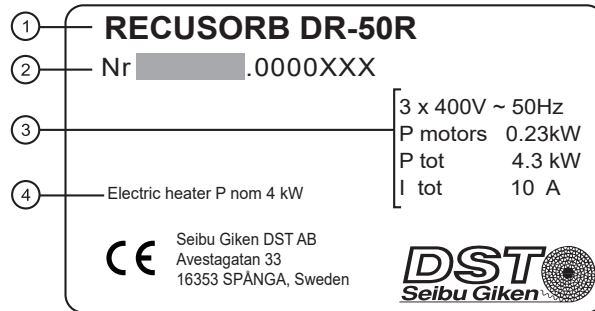


FIGURE 1: Type plate

2.2 SERIAL NUMBER STRUCTURE

The serial number printed on the type plate is composed of codes to enable a fast identification of the unit. Units manufactured pre 2006 use a modified serial number structure which does not match the current structure.

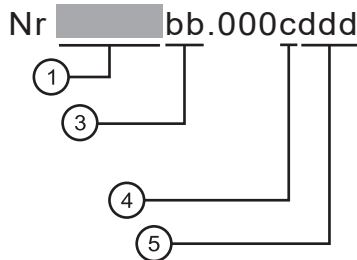


FIGURE 2: Serial number structure for a single-phase unit

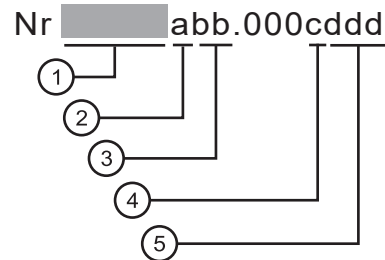


FIGURE 3: Serial number structure for a three-phase unit

1. Model designation
2. Regeneration heater (a) - the type of heater the unit is equipped with.

R = Resistive (electric)	HW = Hot water
G = Gas	WW = Warm water
S = Steam	D = Diesel
	O = Oil

3. Special unit (bb) - code to indicate a special manufactured unit

SP = Special

Note: The absence of SP indicates a standard manufactured unit; e.g. DR-50RSP is a special manufactured unit, and DR-50R is a standard manufactured unit.

4. Serial number (c) - to indicate whether the unit belongs to a special or standard manufactured series

0 = Standard manufactured series

7 = Special manufactured series

5. Serial number (ddd) - serial number of the manufactured unit (ddd)

001, 002, 003, 004...

2.3 OTHER UNIT INFORMATION

In the appendix, a component list details spare parts with articlenumbers as well as the electrical diagram number for the electrical box. If there is a special unit with custom-installed components that list will include a list of installed options.

3 PRODUCT DESCRIPTION

3.1 PRODUCT OVERVIEW

1. Process air in
2. Process filter
3. Dry air out
4. Regeneration air in
5. Regeneration filter
6. Wet air out

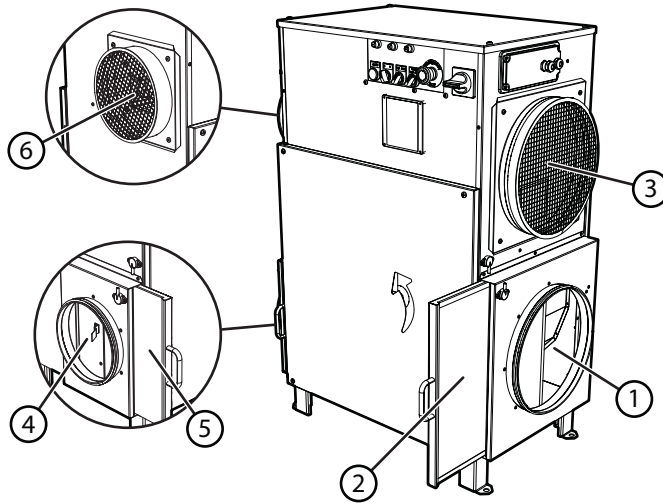


FIGURE 4: Product overview

Variation of installation and components may vary.

3.2 APPLICATIONS


DST desiccant-type dehumidifiers are normally used where dry air is essential to the various manufacturing processes used in chemical, pharmaceutical, food or confectionery industries, or where a dry environment is required for the storing and handling of moisture-sensitive products and raw materials.

The well proven air drying technology using the adsorption principle provides great flexibility in solving humidity problems. It offers the user independent humidity control, down to dew points far lower than the effective operating range of refrigeration dehumidifiers.

3.3 PRINCIPLE OF OPERATION

This is a continuous process with two air streams of different flow rates, normally having a flow ratio of approximately 3:1. The greater flow, *process air*, is dried as it passes through the dehumidifier, while the smaller flow, *regeneration air*, is used to heat the rotor material to drive the adsorbed moisture vapour from the desiccant. The moisture which is removed from the process air is transferred over to the other sector as the rotor slowly turns.

1. Wet air outlet
2. Regeneration air fan
3. Regeneration sector
4. Regeneration heater
5. Regeneration air in
6. Dry air outlet
7. Process air fan
8. Purge sector
9. Rotor motor
10. Process sector
11. Rotor
12. Process air inlet

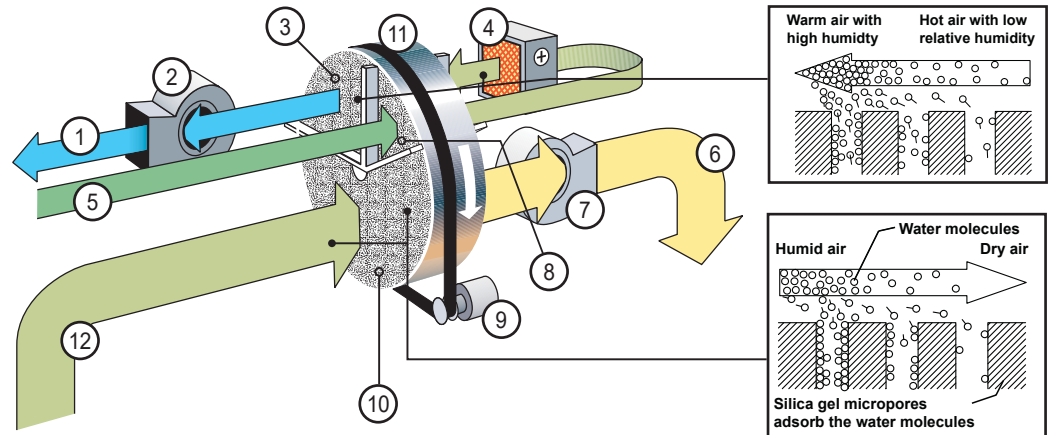

RECUSORB Light is a continuous dehumidifier with internal energy recovery and able to reach very low dew points. During regeneration, sensible heat is adsorbed by the rotor material. The rotor rotates and enters a small purge sector where part of the incoming regeneration air is pre-heated. As a result, the regeneration air is pre-heated before the air enters the regeneration heater, thus reducing the amount of energy to heat the air in the regeneration heater. Purge sector will also desorb some of the water molecules before the rotor enters the process sector.

Now that the excess heat in the rotor material is reduced by the purge sector. This will reactivate the rotor materials to prepare it for adsorption. When the rotor finally enters the process sector, the adsorbing starts immediately until the rotor passes over to the regeneration sector. In this sector the hot air will heat the rotor materials and desorbs the water molecules in to the air and exits through the wet air outlet.

FIGURE 5: Principle of operation & rotor

4 INSTALLATION

4.1 UNIT INSTALLATION

Follow the directions regarding installation of heavy and medium weight dehumidifiers.

Note: Use the installation guidelines as a reference only.

4.1.1 FORK LIFTING

The unit can be off-loaded and positioned using a fork lift by lifting between the feet of the unit, alt., on some dehumidifiers, lift the unit using the built-in handles.

- The forks must be of sufficient length to be in contact with both sides of the base frame.
- The forks should be initially positioned centrally across the middle sections of the unit but must be checked for balance prior to final lifting.
- Units equipped with handles are very heavy. Do not lift the unit single-handedly! Always ask for assistance or use lifting aid!

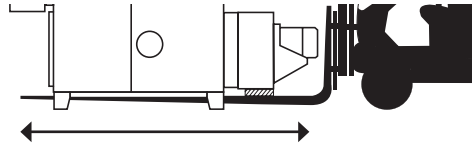


FIGURE 6: Forks in contact with both sides of the frame.

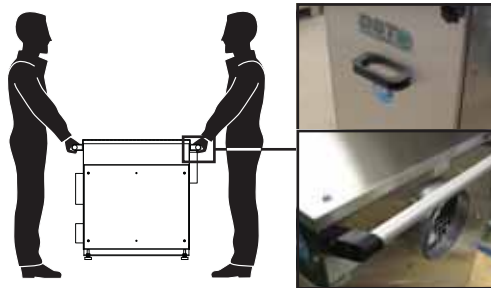


FIGURE 7: Units with handles

4.1.2 TRANSPORT

Dehumidifiers with external fans or a high centre of gravity runs the risk of tipping. Use caution when lifting and moving the dehumidifier.

Note:

- Secure any panels, doors or loose equipment.
- Keep the unit balanced at all times when moving the unit.
- See safety chapter regarding lifting safety.

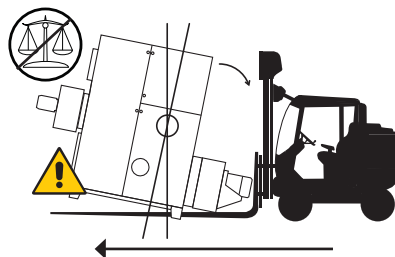


FIGURE 8: Exercise caution when lifting and transport a unit

If not balanced, the unit may run the risk of tipping during transport.

See "11 Technical data" for weight information.

4.1.3 POSITIONING

Position the machine with adequate working space around the unit to allow inspection and service. Size of unit and the position of the access panels/doors vary depending on the model. To avoid incorrect positioning, see the dimensional drawing in the appendix for service space and foot bolt-hole dimensions.

4.2 GENERAL DUCT WORK INSTALLATION

The guidelines are to assist the installers and operators to adjust the duct/dehumidifier installation. Consult a DST representative or local mechanical installation company for more information.

- Avoid recirculation from the separate airflows, direct entering and exiting airflow away from each other.
- Check if the dry air is well distributed in the dehumidified area.
- The regeneration air in and wet air out has to be connected to the outside of the dehumidified area, preferable outdoor.*
- To increase the lifetime of the filter, it is recommended taking air from a higher level where dust and other particles are kept at minimum.*
- Install dry air out duct/channel at a high level.
- To maximize the drying capacity, free blowing on dry air out without airflow reduction is recommended.
- Allow wet air to disperse freely when exiting the duct.**
- It is recommended to insulate the wet air duct.**
- The wet air duct must be installed at a sloping outwards angle, due to risk of condensation inside the duct work. The setup will also prevent condensation flowing back into the dehumidifier.**
- If the duct needs to be installed higher than the wet air outlet, fix a condensate drain at the lowest point of the duct.**
- Do not connect the air outlet to a ventilation system which can create pressure that will result in reverse airflow through the dehumidifier.

*N/A for DR-31 T10.

**N/A for F-31 and AQ-30/31.

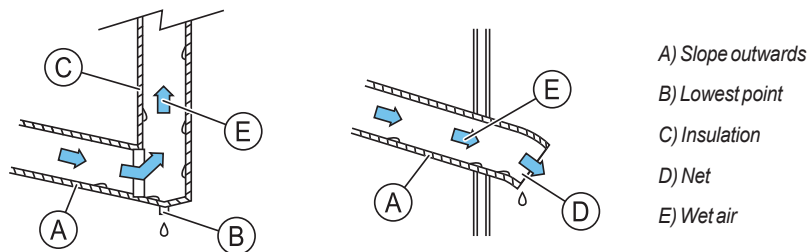


FIGURE 9: Installation of wet air out duct

4.3 HUMIDISTAT/ELECTRONIC CONTROLLER INSTALLATION

Install the humidistat/electronic controller away from the dry air out path to avoid false readings.

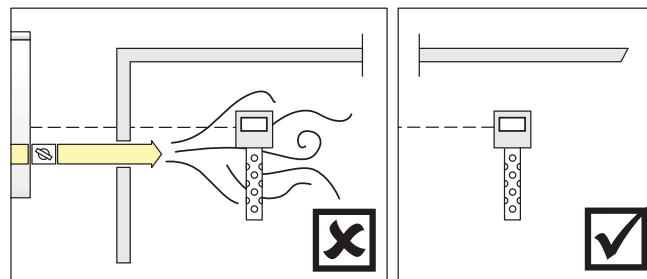


FIGURE 10: Humidistat positioning

4.4 ELECTRICAL CONNECTION

Electrical components should be connected to the supply according to the local regulations and requirements.

4.4.1 POWER SUPPLY

The incoming three-phase cable with L1, L2 and L3 are directly connected to the main switch and PE-cable connected to the earth bar.

The electrical feed must be provided on-site in accordance with the electrical diagram and local requirements.

See electrical diagram for a detailed layout and description.

4.4.2 EARTH LEAKAGE CIRCUIT BREAKER

Due to the high capacitive currents present in the AC drive, earth leakage circuit breakers may not function properly.

Note: This is only applicable if the unit is equipped with a frequency converter.

4.4.3 HUMIDISTAT CONNECTIONS

The dehumidifier has a connection for a 1-step* or 2-step** humidistat. This is optional for some models.

See electrical diagram for connections.

See "7 Functions" for more details.

*For models with no selectable heater output.

**For models with at least two selectable heater output.

4.4.4 0-10VDC SIGNAL

Units with optional connections points for an electronic humidity controller or another regulator signal is marked on the electrical diagram.

See "7 Functions" for more details.

See electrical diagram for connections.

4.4.5 REMOTE CONTROL

The unit has a connection point for a remote switch.

See electrical diagram for connections details.

See "7 Functions" for more details.

4.4.6 POTENTIAL-FREE SIGNALS

Potential free contacts are marked on the electrical diagram for connecting external indicators. These indicators are used to transmit signals to a remote centre, to indicate if unit or fans are still in operation.

Standard indicator

- Alarm indicator
- Run indicator*
- Regeneration fan indicator*
- Process fan indicator*

Optional indicators (N/A for certain units)

- Filter guard (regeneration) indicator
- Filter guard (process) indicator
- MAN/AUTO indicator

Each indicator, standard or optional, are marked on the electrical diagram to indicate whether it is a normally closed or a normally opened circuit.

*Standard indicator may differ depending on model and configuration. See electrical diagram for more information.

5 OPERATION CHECK & ADJUSTMENT

5.1 PRE-OPERATION CHECK

Danger!

The operator of the system must ensure that all personnel who are involved with installation, operation and maintenance of the machine have read the "1 Safety" sections of this manual.

1. Inspect and clean the inside of the unit from foreign objects such as rags, tools, particles of metal, and such, that may pose damage to the inside of the unit.
2. If fitted, ensure that both air balance dampers are fully open and check that the air paths of the duct work are not obstructed in any way.
3. Check that the filters are securely in place.
4. Confirm both motor overload protectors are set to Start/On position.
5. If fitted with condenser or cooler, install a water trap.
6. Confirm thermostat and overheat protection settings are in accordance with table shown "11 Technical data".
7. Confirm the incoming electrical power cable is secure and ensure that live wires are securely located in the correct terminals. Ensure the earth wire is securely located onto the earth strap or earth terminal provided.
8. Check that the rating of the electrical supply fuses is correct, see wiring diagram.


5.2 START-UP TEST AND ADJUSTMENT

1. Close and secure all access doors
2. Switch the main switch to "I" and check the supply voltage is correct.
3. Briefly start the unit and then turn it off. Promptly check if the process fan and regeneration fan is rotating in the correct direction. If incorrect check "9 Troubleshooting". See "6 Operating" on "Start" and "Stop".
4. If fitted, balance the airflows, using the dampers in the duct work or adjust the frequency of each frequency converter to obtain the required values.
5. Check the operation of fault alarms by temporarily reducing the set points of alarm giving thermostats and motor protectors. Do not forget to reset to the original settings according to technical data and electrical diagram.
6. Measure the current on both fans and compare with the electrical specifications printed on the fan motor casing. If the current is too high, reduce the airflow slightly by closing down on the respective balance damper.
7. If connected, check remote control operation.
8. If connected, check remote alarm function (see 5 above).
9. If connected, check humidistat/electronic humidity controller function.

6 OPERATING

6.1 CONTROL PANEL

1. [TH1] - Safety thermostat for regeneration heater - Reset switch
2. [TH2] - Control thermostat for regeneration heater
3. [TH3] - Safety thermostat for wet air outlet - Reset switch
4. [ALARM] - General alarm light
5. [0/RESET/1] - Combined operating switch (“ON=1” or “OFF=0”) and run light indicator. The switch also acts as a reset switch when the emergency stop button has been used.
6. [AUTO/MAN] - Mode switch for AUTO or MAN
7. [HEATER] - Switch for selecting heater power**
8. [EMERGENCY] - Emergency stop button
9. [MAIN] - Main isolation switch
10. Electronic controller* / Humidistat*

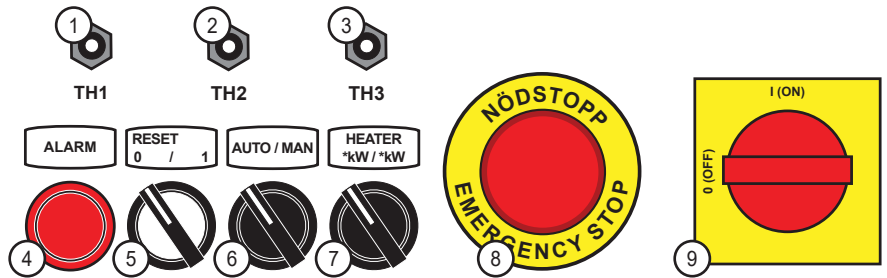

* Option
 ** N/A when fitted with steam heater

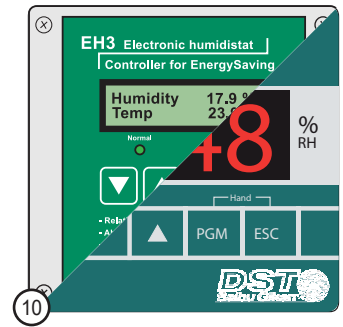


FIGURE 11: Control panel

Note: Control panel layout - for guidance only. Panel supplied may differ from that shown.

6.2 START

Start the unit.

1. Turn [MAIN]-switch to “I”.
2. Turn [AUTO/MAN]-switch to “MAN” for continuous dehumidification or “AUTO” for automatic-mode with connected humidistat/regulator signal.
3. Select capacity by choose the output on [Heater] switch.*
4. Turn [0/1] to “1” and the unit starts running.

* N/A on DR-50 and DC-50. See “6.1 Control panel”.

⚠ Caution!

When “Automatic restart” selected. The unit starts automatically after a power failure. It is important that all personnel involved with installation, operation, maintenance and service of the unit are made aware of this function.

6.3 STOP

Unit will shut down.

-A timed cooling down period on the regeneration fan is initiated before turned off.

1. Turn [0/1] to “0”.

⚠ Caution!

Do not use the main isolator switch to turn off the unit. Always use the described stop procedure to turn off the unit.

6.4 RESET BUTTONS & SWITCHES

Fuses, overheat protections or motor protectors are found inside the electrical cabinet. The position and denotation of the devices may vary depending on the unit and configuration.

Reset is only required when a operation is halted by hardware failure or triggered a safety mechanism. See troubleshooting for more information.

See the electrical diagram for correct layout and information of the reset devices.

Mode	Two-step humidistat (Applies for electrical heater)		One-step humidistat (Applies for steam heater)	
	Humidistat inputs	Heater output	Humidistat input	Heater output
1	Humidistat step 2 (Closed) Humidistat step 1 (Closed)	Full power	Humidistat (Closed)	Full power
2	Humidistat step 2 (Opened) Humidistat step 1 (Closed)	Reduced power*	N/A	N/A
3	Humidistat step 2 (Opened) Humidistat step 1 (Opened)	Zero power**	Humidistat (Opened)	Zero power***

* See technical data for details on electrical heater output for reduced power.

** The unit enters a ventilator mode.

See electrical diagram for details and connections.

7.1.4 0-10VDC CONNECTION

Note: Option

This feature replaces the standard built-in humidistat inputs when Energy saving 2 or 3* is fitted. A 0-10VDC regulator is used to control the dehumidification capacity on a precision level when the built-in Humidistat input feature is insufficient.

Electronic humidity controller	Regulator signal	Capacity output
EH3 T2/others	0...10VDC	0...100%

Note: AUTO-OFF and AUTO-VENT feature is disabled when fitted with Energy saving.**

* N/A for R-51/60/61, RL-60/61/71.

** N/A for DC-50, DR-50, RL-60/61/71 and PLC fitted units. Check the electrical diagram for factory default ventilation mode when Energy saving is fitted.

See "8.6 Energy saving" for more feature description.

See electrical diagram for customer connection.

7.2 REMOTE CONTROL SWITCH

Connections for an external power switch is available as standard. The remote power switch allows the user to shut down or turn on the unit from another location.

Note: The external power switch overrides the manual and automatic mode and must be restored to start the unit.

See electrical diagram for connections.

7.3 TEMPERATURE SAFETY DEVICES

Integral "fail-safe" temperature devices will protect the unit from damage caused by component failure, incorrect settings or abnormal operating conditions.

Type	Thermostat function	Thermostat description	Thermostat location	Reset is required
TH1	Safety thermostat	An overheat protection device that stops the unit if the temperature exceeds the set limit	Inside the regeneration heater compartment	Yes
TH2	Control thermostat	A device that controls the set regeneration temperature	Inside the regeneration heater compartment	No
TH3	Safety thermostat	An overheat protection device that stops the unit if the temperature exceeds the set limit	In the proximity of wet air outlet	Yes

Temperature device types used will vary between models fitted with a PLC and those without a PLC. See below.

Units with PLC	Units without PLC
Two shielded electronic sensors, programmed on PLC as TH2 and TH3. Reset TH3 on PLC. Mechanical thermostat TH1* – reset on thermostat.	Only mechanical thermostats installed - TH1, TH2 and TH3 Mechanical thermostat TH1* and TH3 - reset on thermostats.

* Applies for electric heater only.

See "11 Technical data" for default temperature settings.

See electrical diagram for the location of the thermostats.

! Attention!

If TH1 or TH3 are tripped, an automatic safe shut down procedure will be initiated. On units fitted with a PLC an alarm code will be displayed. On units without a PLC an alarm is indicated by a red light on the control panel. The shut down procedure includes a timed cooling down period and, if fitted, closing of associated valve actuators.

! Attention!

Should TH1 trip, it will automatically disable the regeneration heater circuit breakers. These must be reset before attempting to restart the unit.

! Caution!

Unless otherwise specified, units fitted with regeneration heater coils (water, oil or steam), are not equipped with TH1.

8 OPTION & ACCESSORY

8.1 FILTER GUARD

Filter guard is a pressure indicator which tells the condition of the filter. Different options are available for purchase and comes in different varieties, such as a mechanical (differential U-tube manometer) or an electronic filter guard.

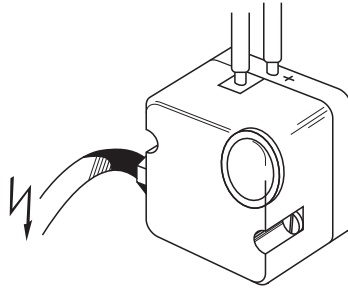


FIGURE 14: Electronic filter guard

If the differential pressure increases beyond the recommended value, the filter needs to be replaced as soon as possible. This is indicated by warning light or a message on the PLC.

See "11 Technical data" for recommended pressure for each filter type.

 


FIGURE 15: Manometer - mechanical filter guard

Note: Only applicable when filter box is selected. See "8.5 Filter box".

8.2 ROTATION GUARD

A safe guard feature that stops the unit from overheating in case of a sudden stop in the rotor rotation. The rotation guard will stop the unit and turn on an alarm indicator or display an error message on the PLC.

Note: Included in Energy saving 2 and 3.

8.3 FREQUENCY CONVERTER TO FANS

The frequency converter is used to set the desired airflow without dampers and reduce start-up current.

See electrical diagram for more information and location of the frequency converter.

Note: Due to the high capacitive currents present in the AC drive, earth current leakage breaker may not function properly.

8.4 INSULATION

19mm (foamed rubber) insulation can be added along the inside of the process air compartment to prevent possible condensation on the outside surface of the unit.

Note: Only applicable when filter box is selected, "8.5 Filter box".

8.5 FILTER BOX

Add-on component to allow sub options to be installed and to improve process airflow.

Available sub-options for filter box:

- 19 mm insulation
- Filter guard
- F7 Filter

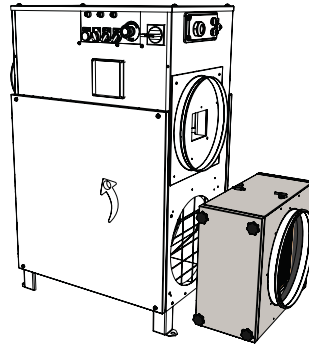


FIGURE 16: Filter box -Add-on module

8.6 ENERGY SAVING

To save energy, the unit can be fitted with different “Energy saving” features.

Energy saving 1: The dehumidifier is controlled by a 1- or 2-step humidistat. E.g., an electric-mechanical HMH, or the electronic controllers EH3 T2 or EH4.

Energy saving 2: Controls the heater for units with electrical heater. The unit is fitted a linearly control, which controls the heater output linearly. The dehumidifier is controlled by an external signal 0-10VDC, e.g., from a electronic controller EH3 T2. See illustration below.

Note: Only applicable for electric heater.

8.7 ELECTRONIC HUMIDITY CONTROLLER AND ELECTRONIC HUMIDISTAT

Control the dehumidification process using the advanced electronic humidity controller EH3 T2 or the simpler electronic humidistat EH4. The devices can be built in the electrical box next to the control panel or loose device for on-site installation.

See “8.6 Energy saving” for more information on what features they can be installed on.

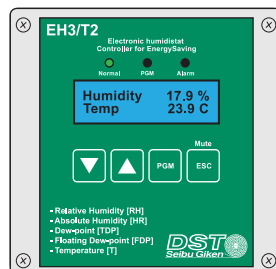


FIGURE 17: EH3 T2

Electronic humidity controller with multiple settings and advanced control for dehumidification,

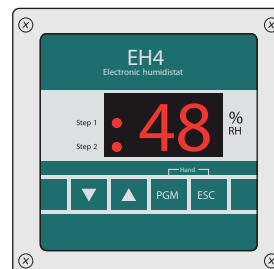


FIGURE 18: EH4

2-step humidistat for less demanding dehumidification control.

Note: Data sheet and user’s manual is available separately.

8.8 AUTO/ECO VENT

AUTO-ECO VENT is a semi-ventilation mode that provides an airflow in intervals by turning the process fan ON and OFF.


The default time setting for the process fan is: **ON** (5 min) and **OFF** (55 min). Adjusting the time setting is only possible with a PLC installed, without a PLC the default time setting applies.

Note: Included in Energy saving 2.

8.9 PLC - C4

The C4 is a touchscreen enabled PLC with multiple I/O and is installed with custom software that allows advanced dehumidification for a specific need.

Add-on modules allows, e.g. remote control using modbus, ethernet using TCP/IP modbus or modem control.

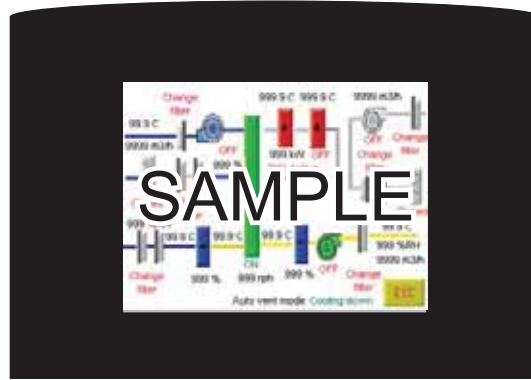

FIGUR1: C4PLC touch screen

Consult a DST representative for more information.

9 TROUBLESHOOTING

9.1 ERROR CODES

The dehumidifier will automatically shut down if an error is detected. During shut down, a timed cooling down period on the regeneration fan is initiated before turned off. See below for error codes.

CODE	EXPLANATION	CAUSE	SOLUTION
If the unit stops and the ALARM-light is lit.	Process fan overload. Regeneration fan overload.	Excessive airflow. Short-circuit or fan malfunction.	Check fan. Check setpoint of F1/F2 or Q1/Q2. Reset F1/Q1 or F2/Q2 – check and adjust airflow. Have a qualified electrical technician to investigate.
	Regeneration air thermostat TH1 has tripped. Regeneration heater overload. Note: Not applicable when fitted with steam.	TH1 setting incorrect. TH1 defective (fail safe). Incorrect shut down. Insufficient regeneration airflow. Excessive regeneration heater power. Regeneration heater malfunction.	Check TH1 setting. Check correct operation of TH1. Reset TH1 - reset F3 - F5. Check regeneration airflow and fan operation. Check TH2 setting. Check and replace heater.
	Overload in the transformer.	Short-circuit or transformer malfunction.	Check transformer.
	Wet air thermostat tripped (TH3).	TH3 setting incorrect. Excessive regeneration airflow. Excessive regeneration heater power . Incorrect or intermittent rotor rotation. Insufficient system moisture load.	Check TH3 setting. Check and adjust regeneration airflow. Check TH2 setting. Check rotor drive system. Check process airflow and fan operation. Check process inlet moisture content. Check RH controller set point/output control signal.
	Rotation guard sensor has not detected movement (KA13).	Rotor drive system failure. Sensor failure or incorrect clearance.	Check drive motor & transmission (correct belt tension). Check clearance gap between sensor and rotor marker. Turn the [0/1]-switch to "0"-position and main switch to "0/OFF"-position to restore.
Frequency converter alarm.	Frequency converter internal alarm activated – fault code shown.	Refer to converter manual for fault code explanation.	
EMERGENCY STOPBUTTON is lit.	Operation terminated.	Emergency button activated. [0/1]-switch is active (if fitted with auto restart).	Pull the emergency button to restore. Turn the [0/1]-switch to "0"-position to restore.
The unit is running and the ALARMΔP-light is lit. Note: Applicable for RL-61/71 only.	Internal pressure balance is not optimal.	The negative pressure on the regeneration air chamber is insufficient.	Throttle the damper on regeneration air in or dry air out until ALARMΔP-light is turned off. Reduce the pressure fall by changing the process inlet filter more frequent. Check the airflow guard. Check the airflow guard setting (recommended is 30Pa). Note: Top panel must be mounted during testing to avoid triggering the ALARMΔP.

FIGURE 19: Troubleshooting table and solution

9.2 GENERAL TROUBLESHOOTING

Check for following if the unit will not start-up.

PROBLEM	CAUSE	SOLUTION
Unit will not start. None of the light indicators are on.	No power to unit. No power to control circuit. The emergency stop button is active.	Confirm electric supply and check local isolator is on. Check remote control is set to 'On/Run' position. Check all circuit breakers are set to 'Start/On' position. Have a qualified electrical technician to investigate. Pull the emergency stop button and then turn the operating switch to "0".
The ALARM-light is on but the unit will not start.	Alarm circuit is preventing start-up.	Check TH1 & TH3 thermostats are set. Check all circuit breakers are set to 'Start/On' position. Check fan motor overloads are set to 'Start/On' position.
The RUN-light is on, but the dehumidifier does not appear to be operating.	The measured value is below the control set point. Remote stop/start is disabled.	Operation can be checked by lowering control set point or switching to 'manual' operation. Check remote control is set to 'On/Run' position and if the cable is undamaged.
The RUN-light is on, but no regeneration airflow is detected. Note: Applicable for DC-50 only.	The flow guard has detected no airflow movement and deactivated the regeneration heater.	Remove blockages or open dampers on the regeneration airflow. Check regeneration fan.

FIGURE 20: General troubleshooting table and solution

9.3 CAPACITY TROUBLESHOOTING

The dehumidifier performance can be roughly checked by feeling the temperature of the uninsulated duct work near the unit.

PROBLEM	OBSERVATION	SOLUTION
The dehumidifier does not maintain required condition or achieve expected performance, despite being operated at full power.	Dry air outlet duct is warm and wet air outlet duct is very warm (normal operation).	Check actual moisture load against calculated design moisture load. Check controller set point/output signal. Check airflows are set as specified, adjust as necessary. Check air filters. Check dehumidifier casing and duct work for air leakage. Check rotor alignment and condition of radial and peripheral rotor seals.
	Both outlet air ducts are cold (no alarm).	Check regeneration airflow and fan operation. Check regeneration heater operation. Check controller set point/output signal. Check TH2 setting.
	Dry air outlet duct is cold, wet air outlet duct is hot (no alarm).	Check rotor rotation. Check process airflow and fan operation.
Measured airflows are lower than specified.	Fan is not rotating in direction indicated by arrow on fan motor casing. The incoming phase supply is incorrect.	Isolate mains electrical power supply to the unit. Change over two of the three incoming phase supply wires. Re-check fan rotation.

FIGURE 21: Capacity troubleshooting and solution table

10 MAINTENANCE

10.1 REGULAR SERVICE INTERVAL

Service time	Run time in hours (x1000)	0	4'	8'	12'	16'	20'	24'	28'	32'	36'	40'	44'	48'
	Calendar time in months	0	6	12	18	24	30	36	42	48	54	60	66	72
Inspect filter - replace if necessary		X	X	X	X	X	X	X	X	X	X	X	X	X
Clean and inspect the unit				X		X		X		X		X		X
Inspect fan - replace if necessary				X		X		X		X		X		X
Inspect features and functionality		X		X		X		X		X		X		X
Inspect electric, feature, cables and electrical components - replace if worn or damaged				X		X		X		X		X		X
Inspect access panels, locks and panel seals - replace if necessary				X				X				X		
Inspect duct and duct connections		X				X				X				X
Inspect heater and cooler				X		X		X		X		X		X
Inspect humidistat/humidity sensor - replace if necessary				X		X		X		X		X		X
Inspect rotor motor - replace if necessary				X		X		X		X		X		X
Inspect radial & peripheral seals - replace if worn or damaged				X		X		X		X		X		X
Check operation of geared drive motor, drive pulley, belt/chain, rotor - adjust as necessary*				X		X		X		X		X		X
Inspect rotor for contamination or damage - clean/repair (contact DST)		X		X		X		X		X		X		X
Inspect condenser*				X		X		X		X		X		X
Inspect evaporator*				X		X		X		X		X		X
Inspect compressor*				X		X		X		X		X		X
Inspect cooling system*		X		X		X		X		X		X		X

Safety feature check (if fitted)														
Function test on thermostats			X		X		X					X		X
Function test on the freeze alarm	X		X		X		X		X		X		X	X
Function test on rotation guard alarm, check and adjust sensor clearance	X		X				X					X		
Function test on damper, actuator and valves	X		X		X		X		X		X		X	X
Function test on post-cooling function	X		X		X		X		X		X		X	X

FIGURE 22: Service chart

This is a general service chart and the time interval vary depending on the operating condition. Some options listed here may not be installed or available for this specific unit.

Danger!

All personnel involved with installation, operation and maintenance of this unit should familiarise themselves with the safety section of this manual.

*Applicable for Frigosorb and Econosorb.

10.2 WASHING THE ROTOR

The D-MAX rotor has a distinct advantage over other types of desiccant rotors in that dust and grease can be washed out of the material without the need for reimpregnation after treatment. In all normal applications however it must be emphasised that washing of the rotor should be considered as a last resort having alleviated all other possible defects first.

Caution!

Please contact a DST-representative before attempting to wash the rotor!

11 TECHNICAL DATA

RLA-60R RLA-60LR

Capacity		
Capacity [kg/h] 1)	4	5
Nominal dry air flow [m ³ /h] 2)	850	1000
External static pressure dry air [Pa] 2)	300	100
Nominal wet air flow [m ³ /h] 2)	180	250
External static pressure wet air [Pa] 2)	250	150
Regeneration heater - Electric		
Heater power [kW]	5.4	7.5
Number of electric heater steps	2	2
Heating power in steps [kW]	1/2 - 3 2/2 - 5,4	1/2 - 4,5 2/2 - 7,5
Heating power with linear control [kW] 4)	0-5.4	0-7.5
Humidistat 2 opens and reduce the effect to [kW]	3	4.5
Total power - Electrical		
Total motor power [kW]	0.67	0.8
Total power [kW]	6.07	8.3
Other electrical information		
Supply fuse (Electric) 3x400V/50Hz [A]	16	16
Humidistat connection	230VAC	230VAC
Humidistat supply current [A] 5)	< 1	< 1
Temperature setpoint settings		
Overheat protection TH1 [C]	200	200
Thermostat TH2 [C]	180	180
Overheat protection TH3 [C]	95	95
Other technical data		
Air filter class (regeneration/process)	G4/G4	G4/G4
Filter change at pressure (G4/F7) [Pa]	200/250	200/250
Noise level [dB(A)] 3)	-	-
Regeneration air fan delay [min]	10	10
Weight [kg]	68	68

1) Valid for inlet conditions 20°C/60%RH (equal 1.2 kg/m³).

2) If no data is stated here the volume flow above is given at free blowing airflow.

3) Unit connected to uninsulated ducts. Nominal airflows.

4) Applies for dehumidifiers with installed optional feature.

5) The current provided by the humidistat connection. Only use humidistats that are capable of this load current.

The content of in this document may be subject to change without prior notice. For questions and comments regarding the content in this document, please send it to





Seibu Giken DST AB, ATT: Documentation, Avestagatan 33, 163 53 SPÅNGA, SWEDEN.

E-mail: info@dst-sg.com, subject: Documentation.



Component list RLA-60R/LR

Description	Antal Qty.	Benämning	Typ, ritn nr o dyl Type, Drwg No etc	60R	60LR	Art. Nr Art No	Tillverkare / Leverantör Manufact. / Supplier	Anmärkningar Notes
Rotor unit		Rotorenhet						
Rotor	1	Rotor	DMR-550H05	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	108676	Seibu Giken /	
Radial seal	0,15m	Teflonremsa	0,35x35x1000mm; Teflon	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	105241		
Rotormotor	1	Drivmotor	M6RX6G4GGA 4P 6W	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>			
Beltpulley	1	Remskiva	18 5M 13/10F	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>			
Belt	1	Drivrem	1870 5M 09	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	104654		
Fans		Fläktar						
Proc.fan	1	Processfläkt	GSF-2-160/62 037T 0,37 kW 230/400V 1,0A	<input checked="" type="checkbox"/>	<input type="checkbox"/>	109831		
Proc. Fan	1	Processfläkt	GSF-2-160/62 055T 0,55 kW 230/400V 1,3A	<input type="checkbox"/>	<input checked="" type="checkbox"/>	108717		
Reg.fan	1	Reg.fläkt	GSF-2-146/62-025T 0,25 kW 3x230/400V 0,65	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	108985		
Filter		Filter						
Filter	1	Filter	413*440*15 G4	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>			Process
Filter	1	Filter	149*322*15 G4	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>			Regeneration
Regeneration heater - Resistive heater		Regenereringsvärmare - Resistivvärmare						
Reg.heater	1	Reg. värmare	5,4 kW 3x230/400V	<input checked="" type="checkbox"/>	<input type="checkbox"/>	108989		
Reg.heater	1	Reg. värmare	7,5 kW 3x230/400V	<input type="checkbox"/>	<input checked="" type="checkbox"/>	108990		
Overheat protection	1	Överhettningsskydd	TH1: heaTHERM 160-200°C	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	106157		
Electric box	1	Elcentral		<input checked="" type="checkbox"/>	<input type="checkbox"/>			
Electric box	1	Elcentral		<input type="checkbox"/>	<input checked="" type="checkbox"/>			
Other		Övrigt						
Overheat protection	1	Överhettningsskydd	TH3: heaTHERM 50-100°C	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	106158		
Thermostat	1	Termostat	TH2: heaTHERM 0-200°C	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	106159		

This document and its contents are the exclusive property of DST Seibu Giken and must not be copied, reproduced, transmitted or communicated to any other party or used for purposes not expressly permitted by us.

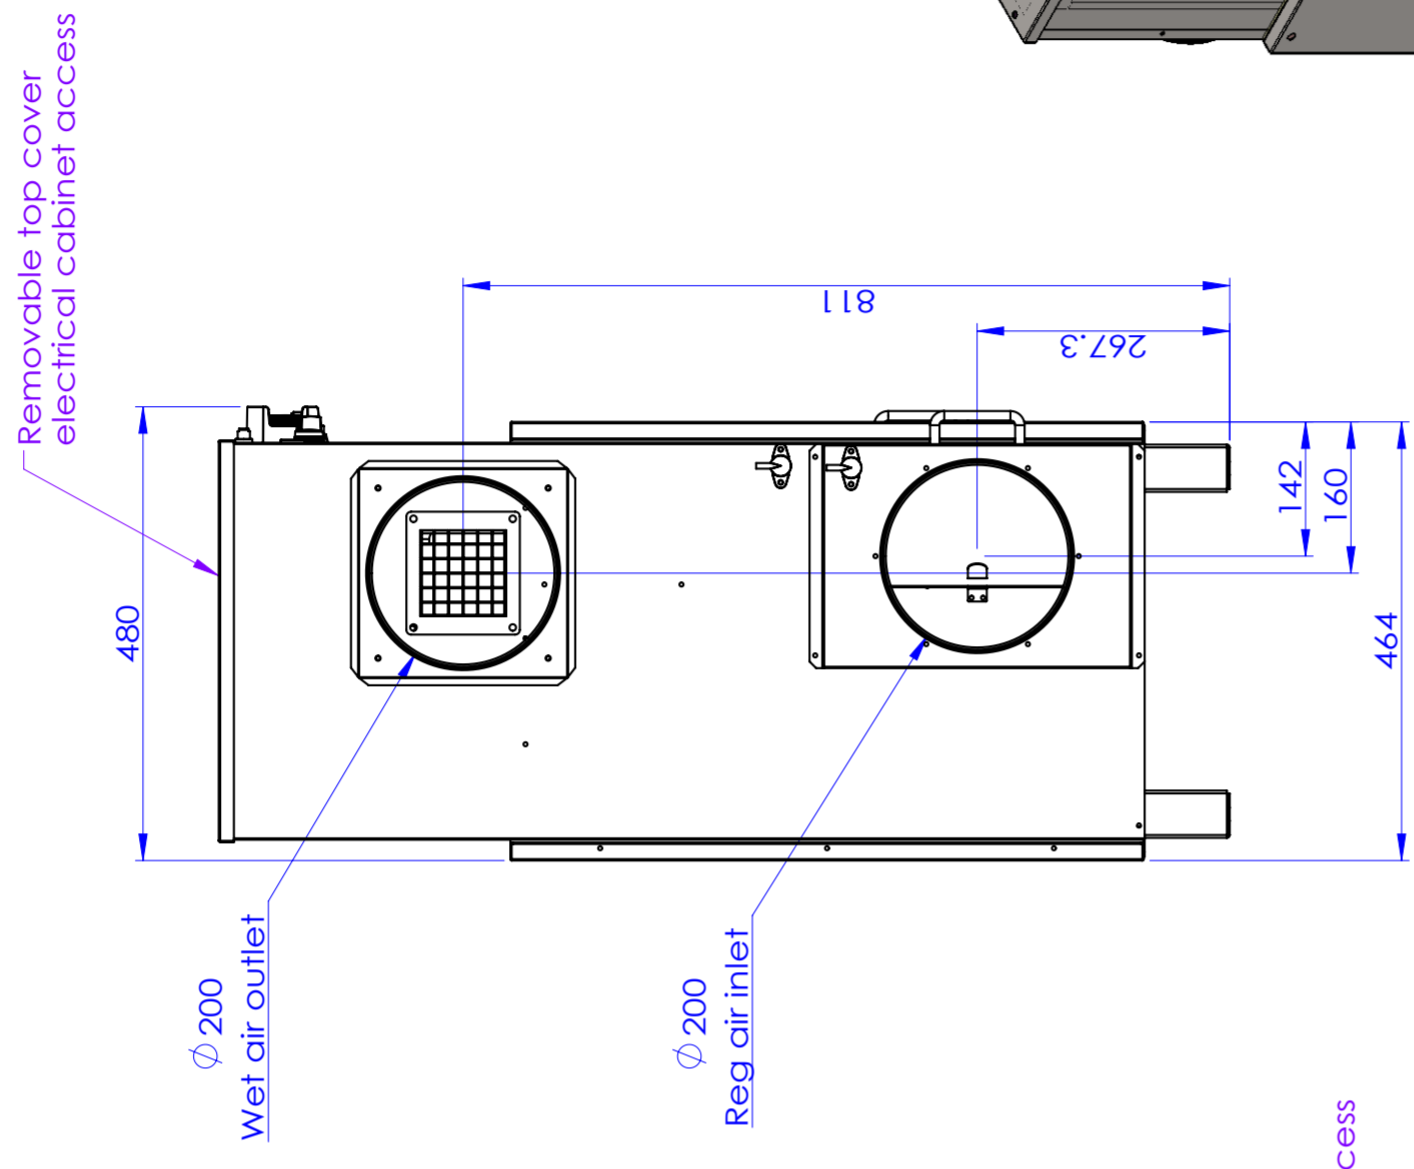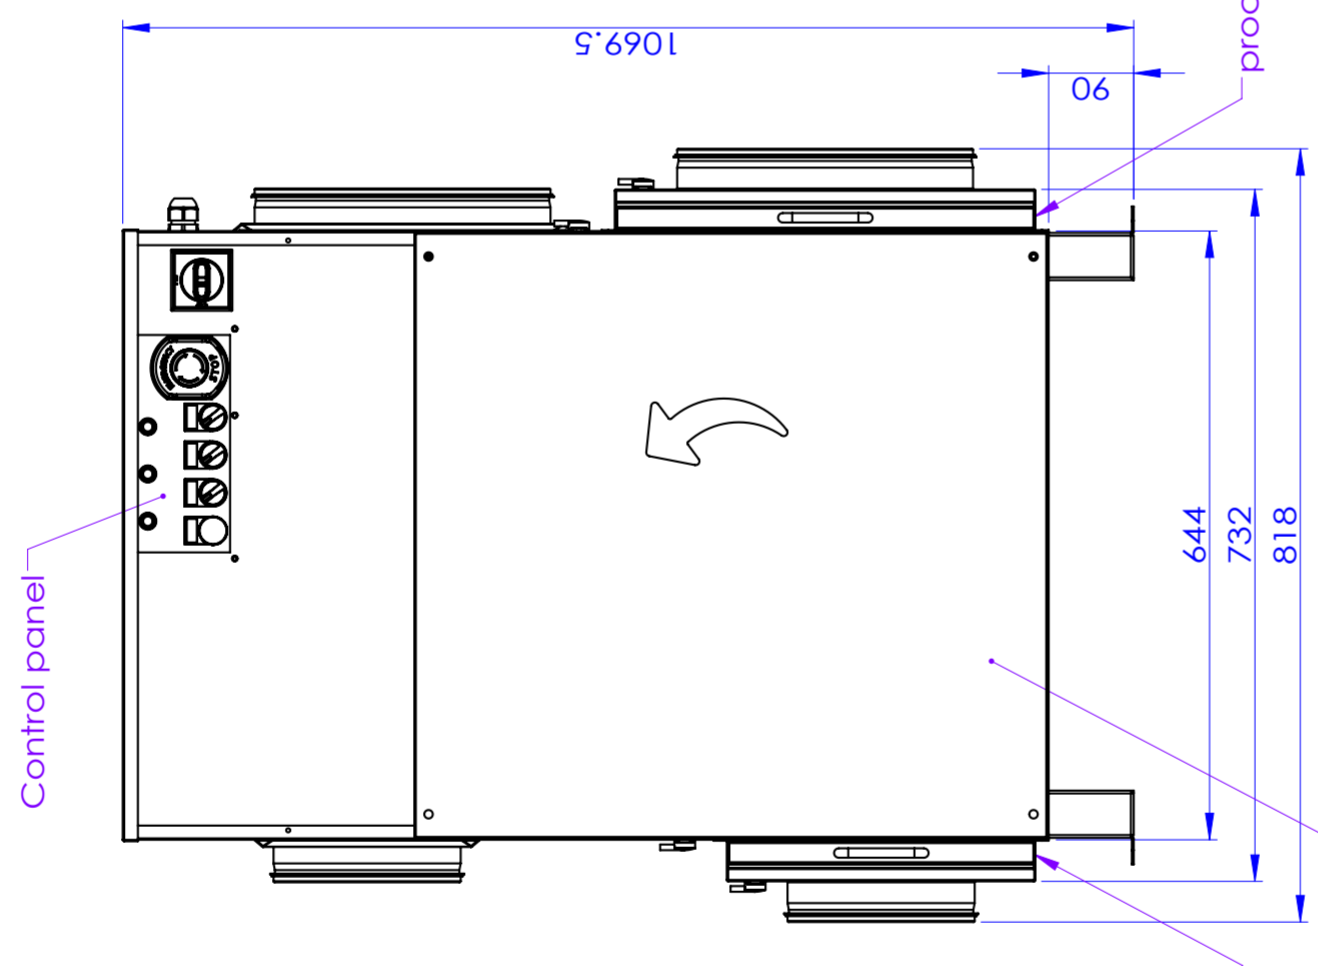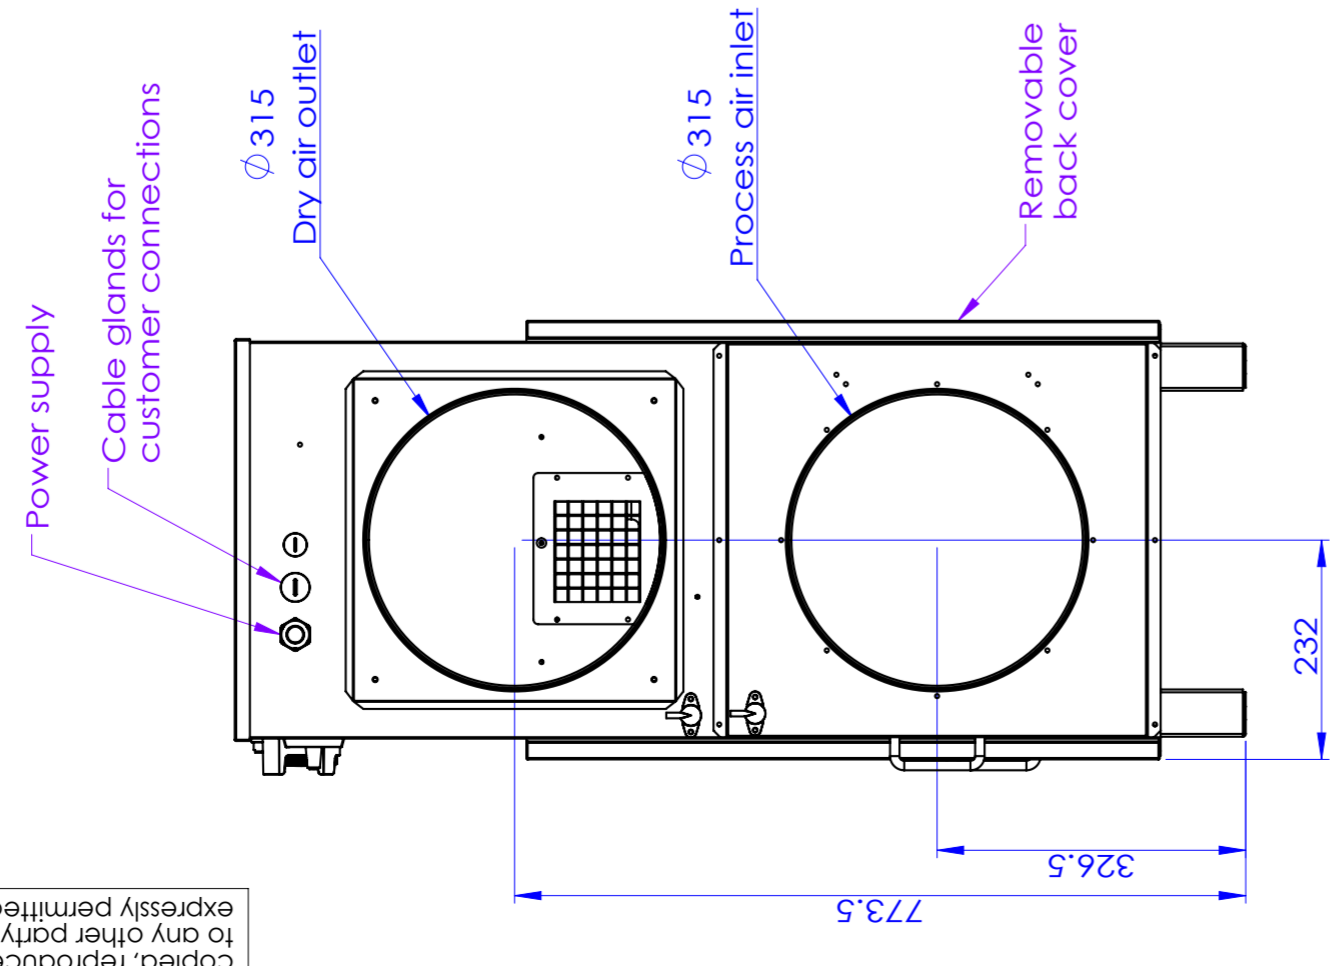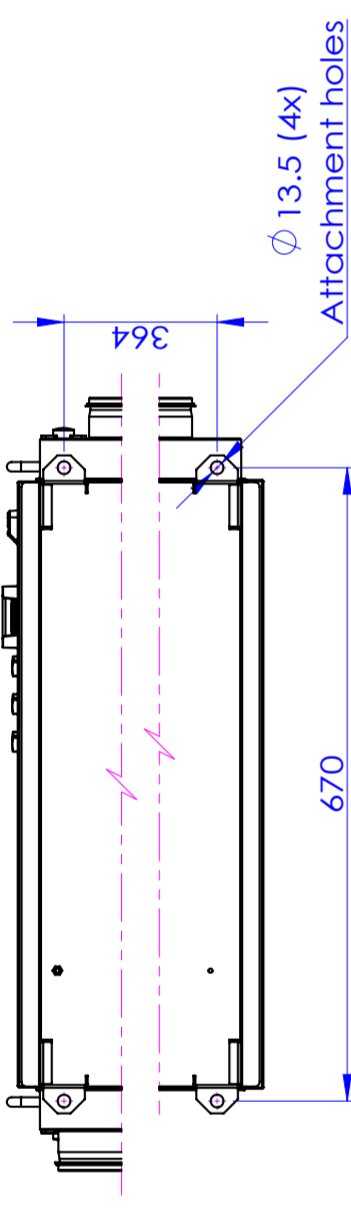


Packing dimensions :
L*W*H = 900*600*1250
Weight ~ 70kg

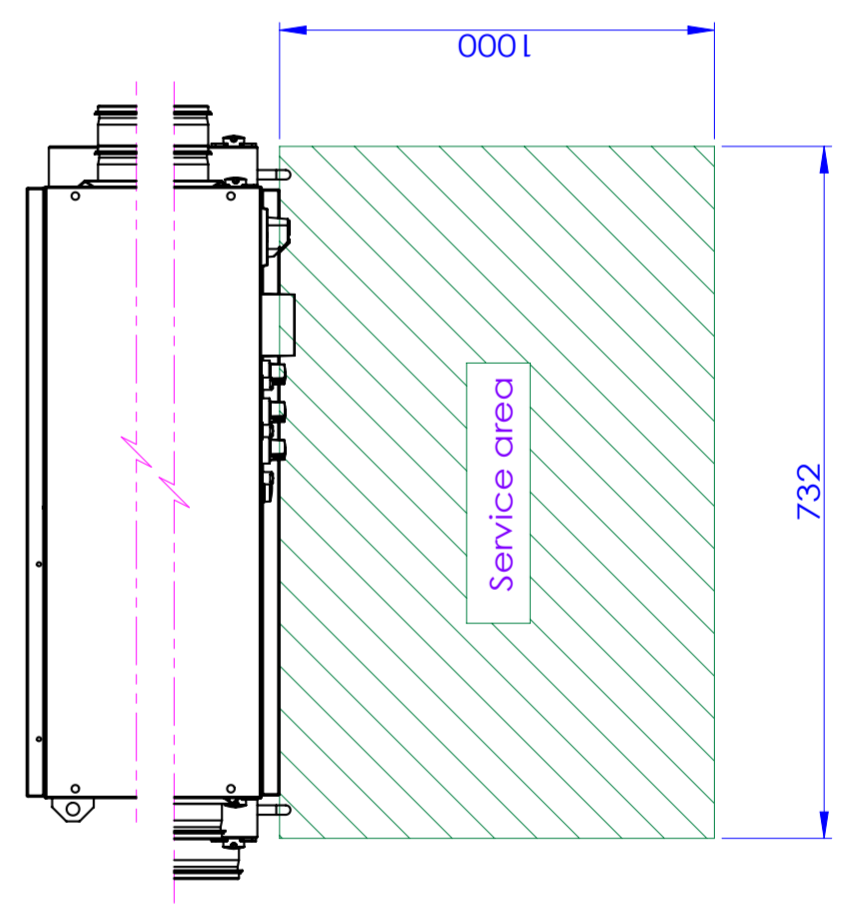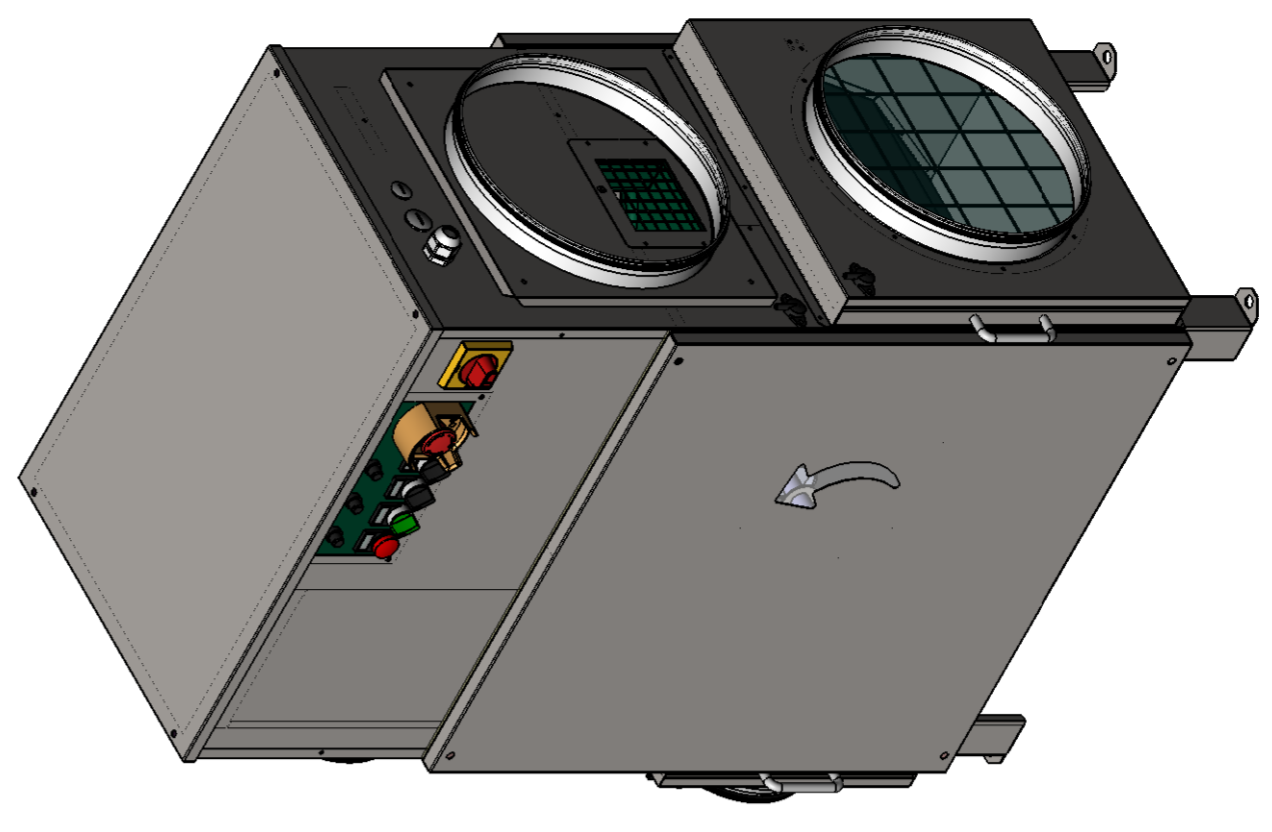


Design by Eric Xue	Date 20180815	Order No. /	Title/Description Dehumidifier Dimension drawing
Drawn by Eric Xue	Date 20180815	Unit Type RLA-60	
Modified by /	Date /	Material /	
Checked by /	Date /	Remove Paper edges /	
Approved by /	Date /	Tolerance standard ISO 2768-1m	
DST		Scale 1:8	Page 1/1
		Format A2	Version -00
		Drawing No. DSTCM5000700	


0 1 2 3 4 5 6 7 8 9

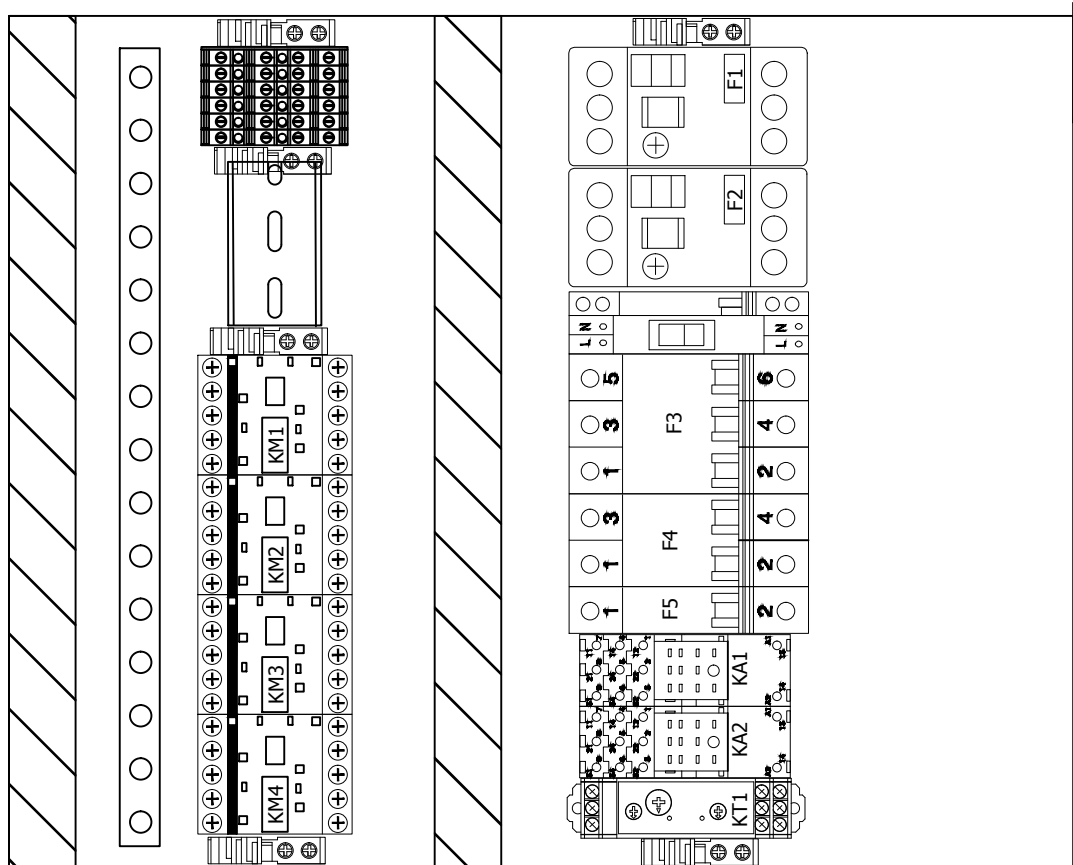

Upper view of the control unit

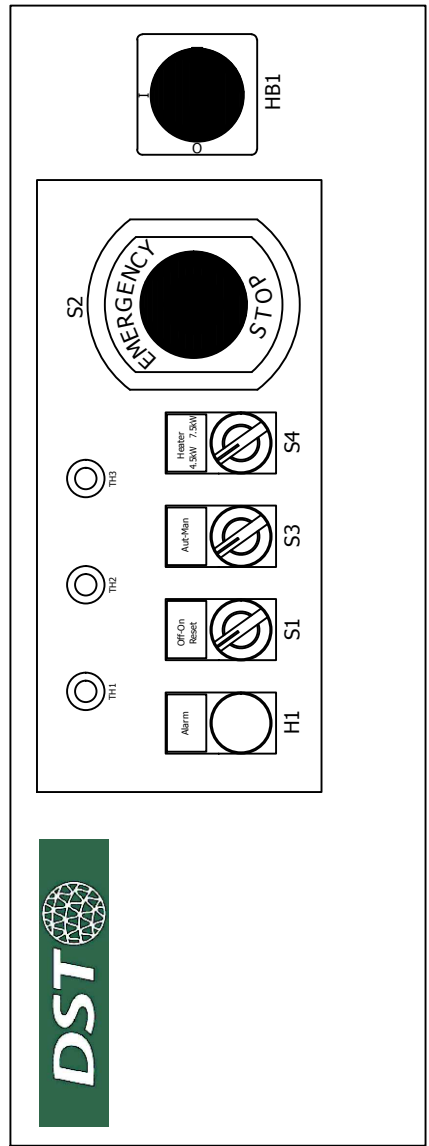

Upper view of the control unit (upper level)

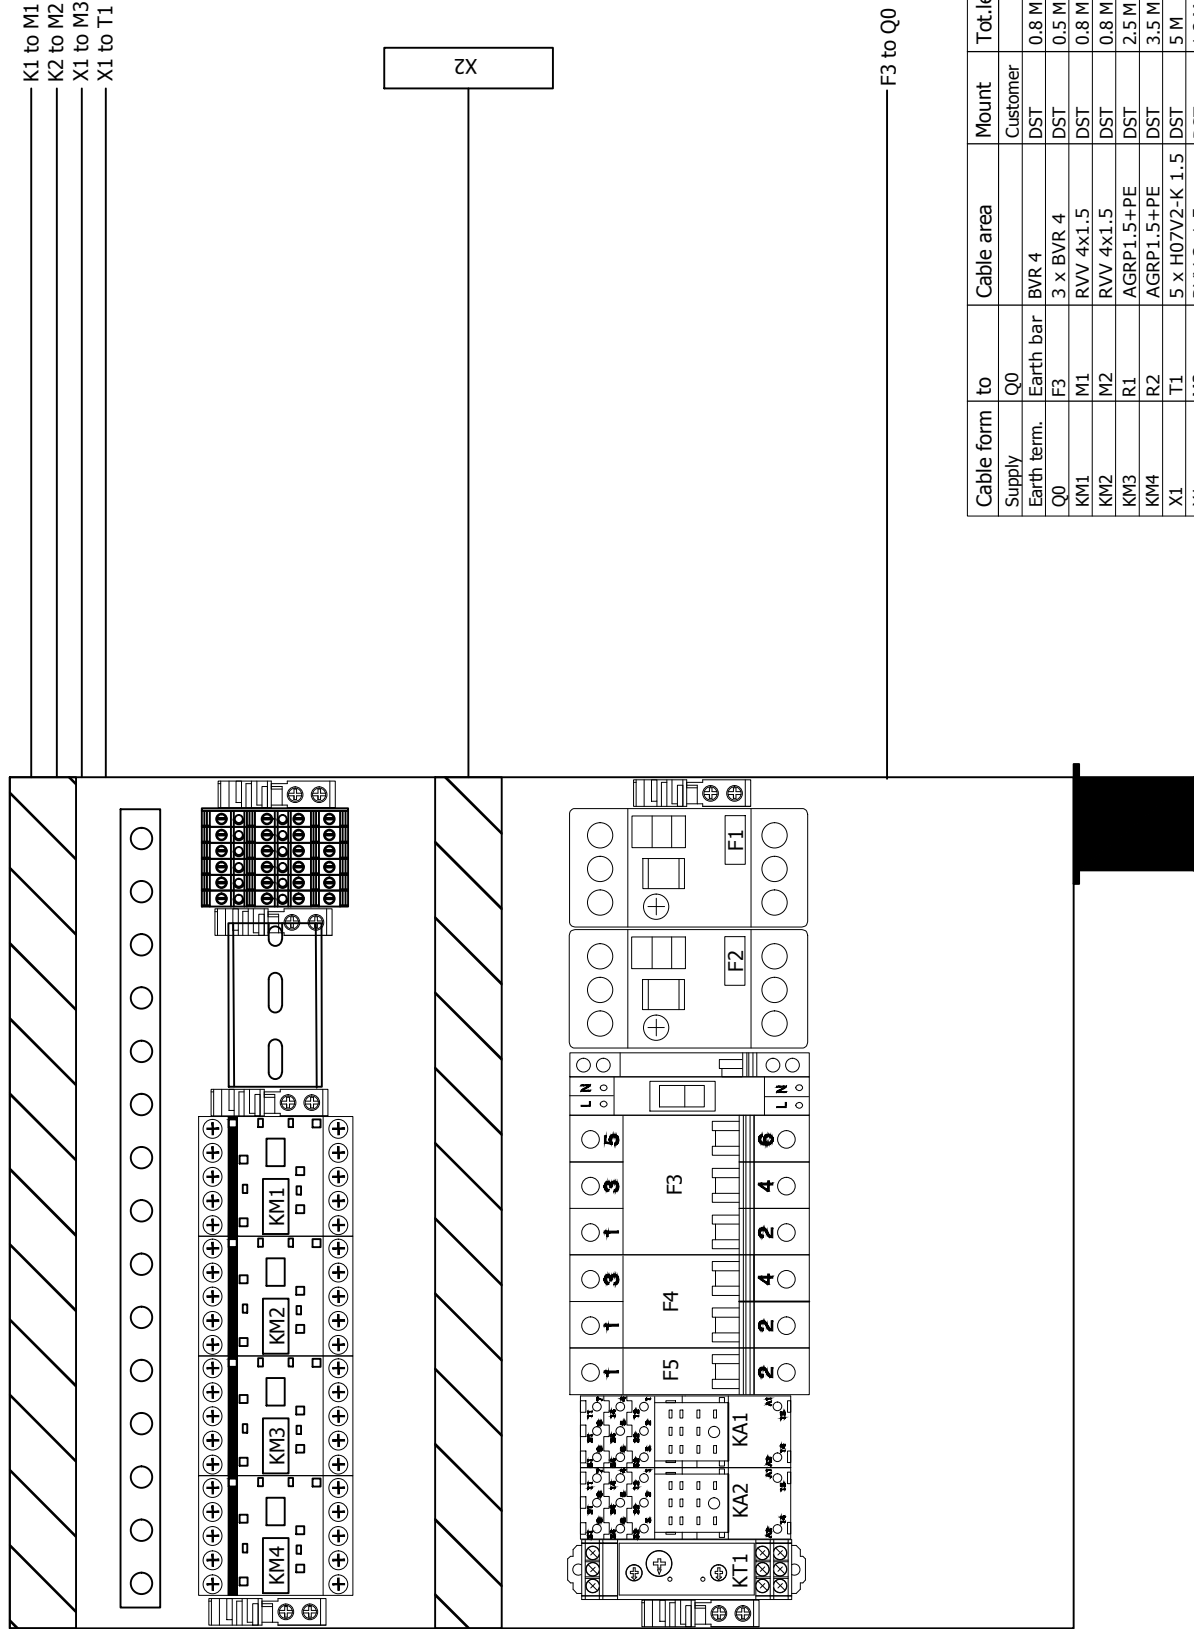



K1 to M1
K2 to M2
X1 to M3
X1 to T1

X2

F3 to Q0


Cable form	to	Cable area	Mount	Tot.lenght*	Connection
Supply	Q0		Customer		
Earth term.	Earth bar	BVR 4	DST	0.8 M	Green/Yell
	F3	3 x BVR 4	DST	0.5 M	Black
KM1	M1	RVV 4x1.5	DST	0.8 M	Black-Brown-Gray-Green/Yell
KM2	M2	RVV 4x1.5	DST	0.8 M	Black-Brown-Gray-Green/Yell
KM3	R1	AGRP1.5+PE	DST	2.5 M	White
KM4	R2	AGRP1.5+PE	DST	3.5 M	White
X1	T1	5 x H07V2-K 1.5	DST	5 M	Black + Green/Yell
X1	M3	RVV 3x1.5	DST	1.2 M	Gray-Blue-Green/Yell
Contorl unit	X2	H05V2-K 1.0	DST	0.7 M	Black
X2	Y1	3 x 1.0	Customer		
X2	Signal	4 x 1.0	Customer		

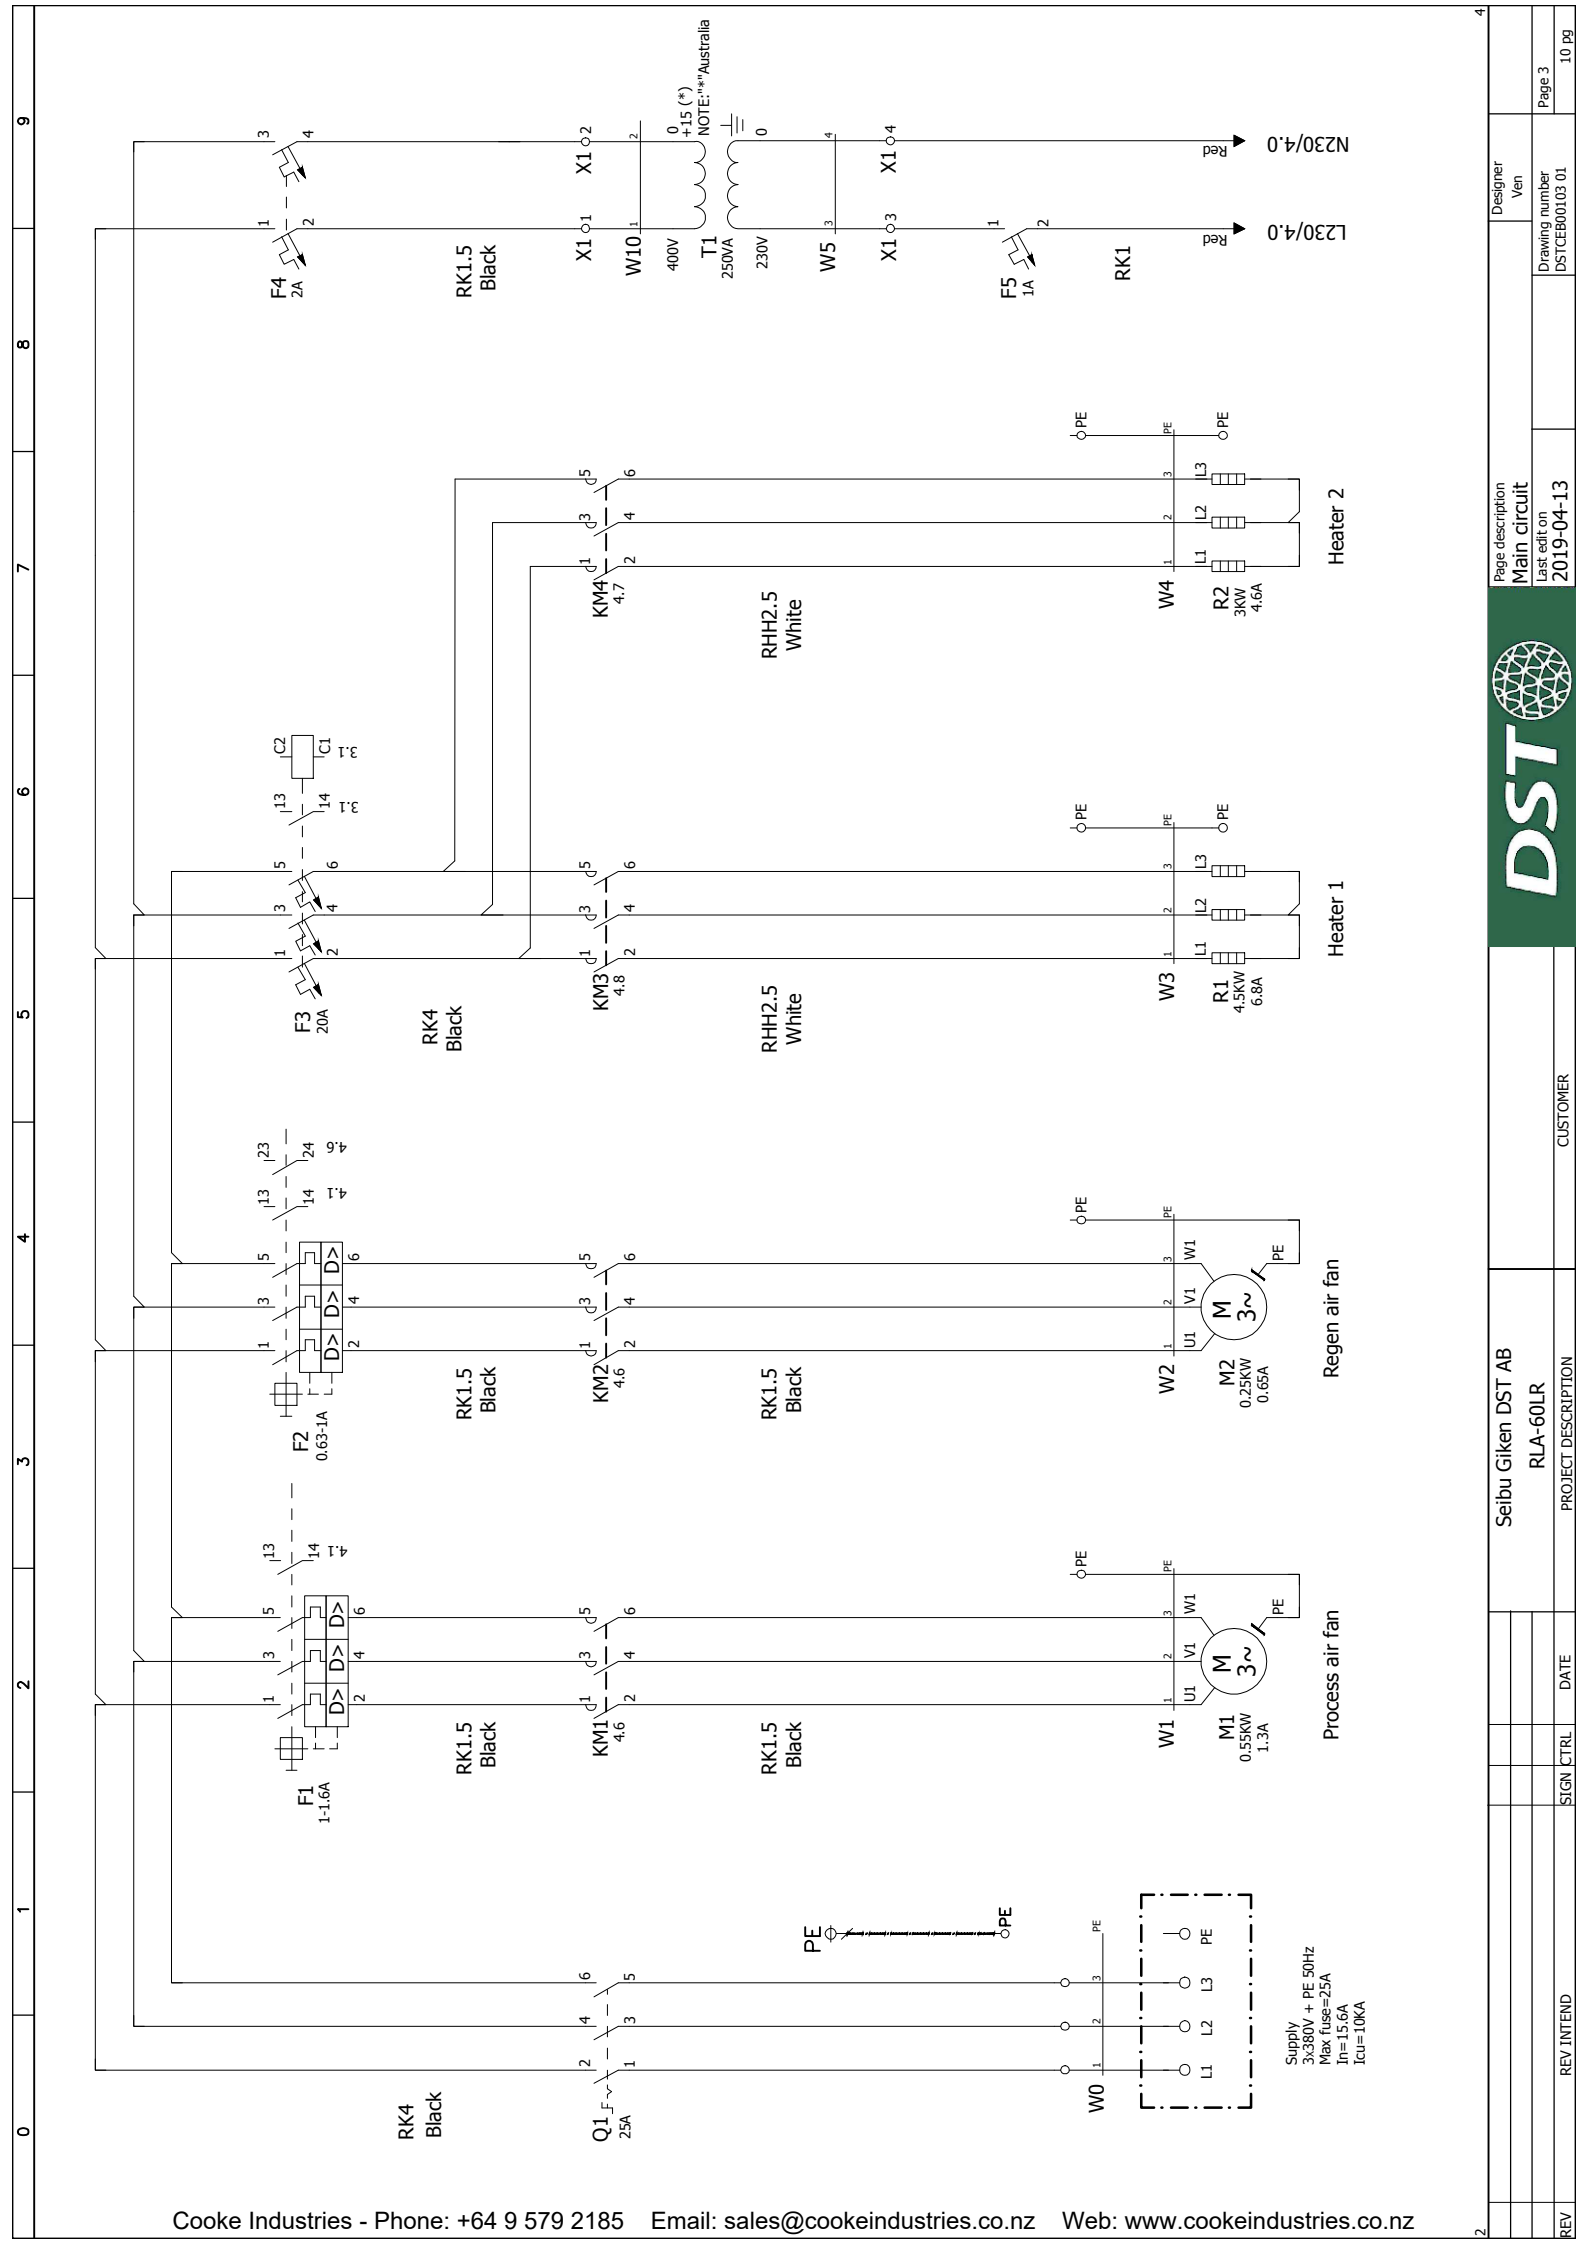

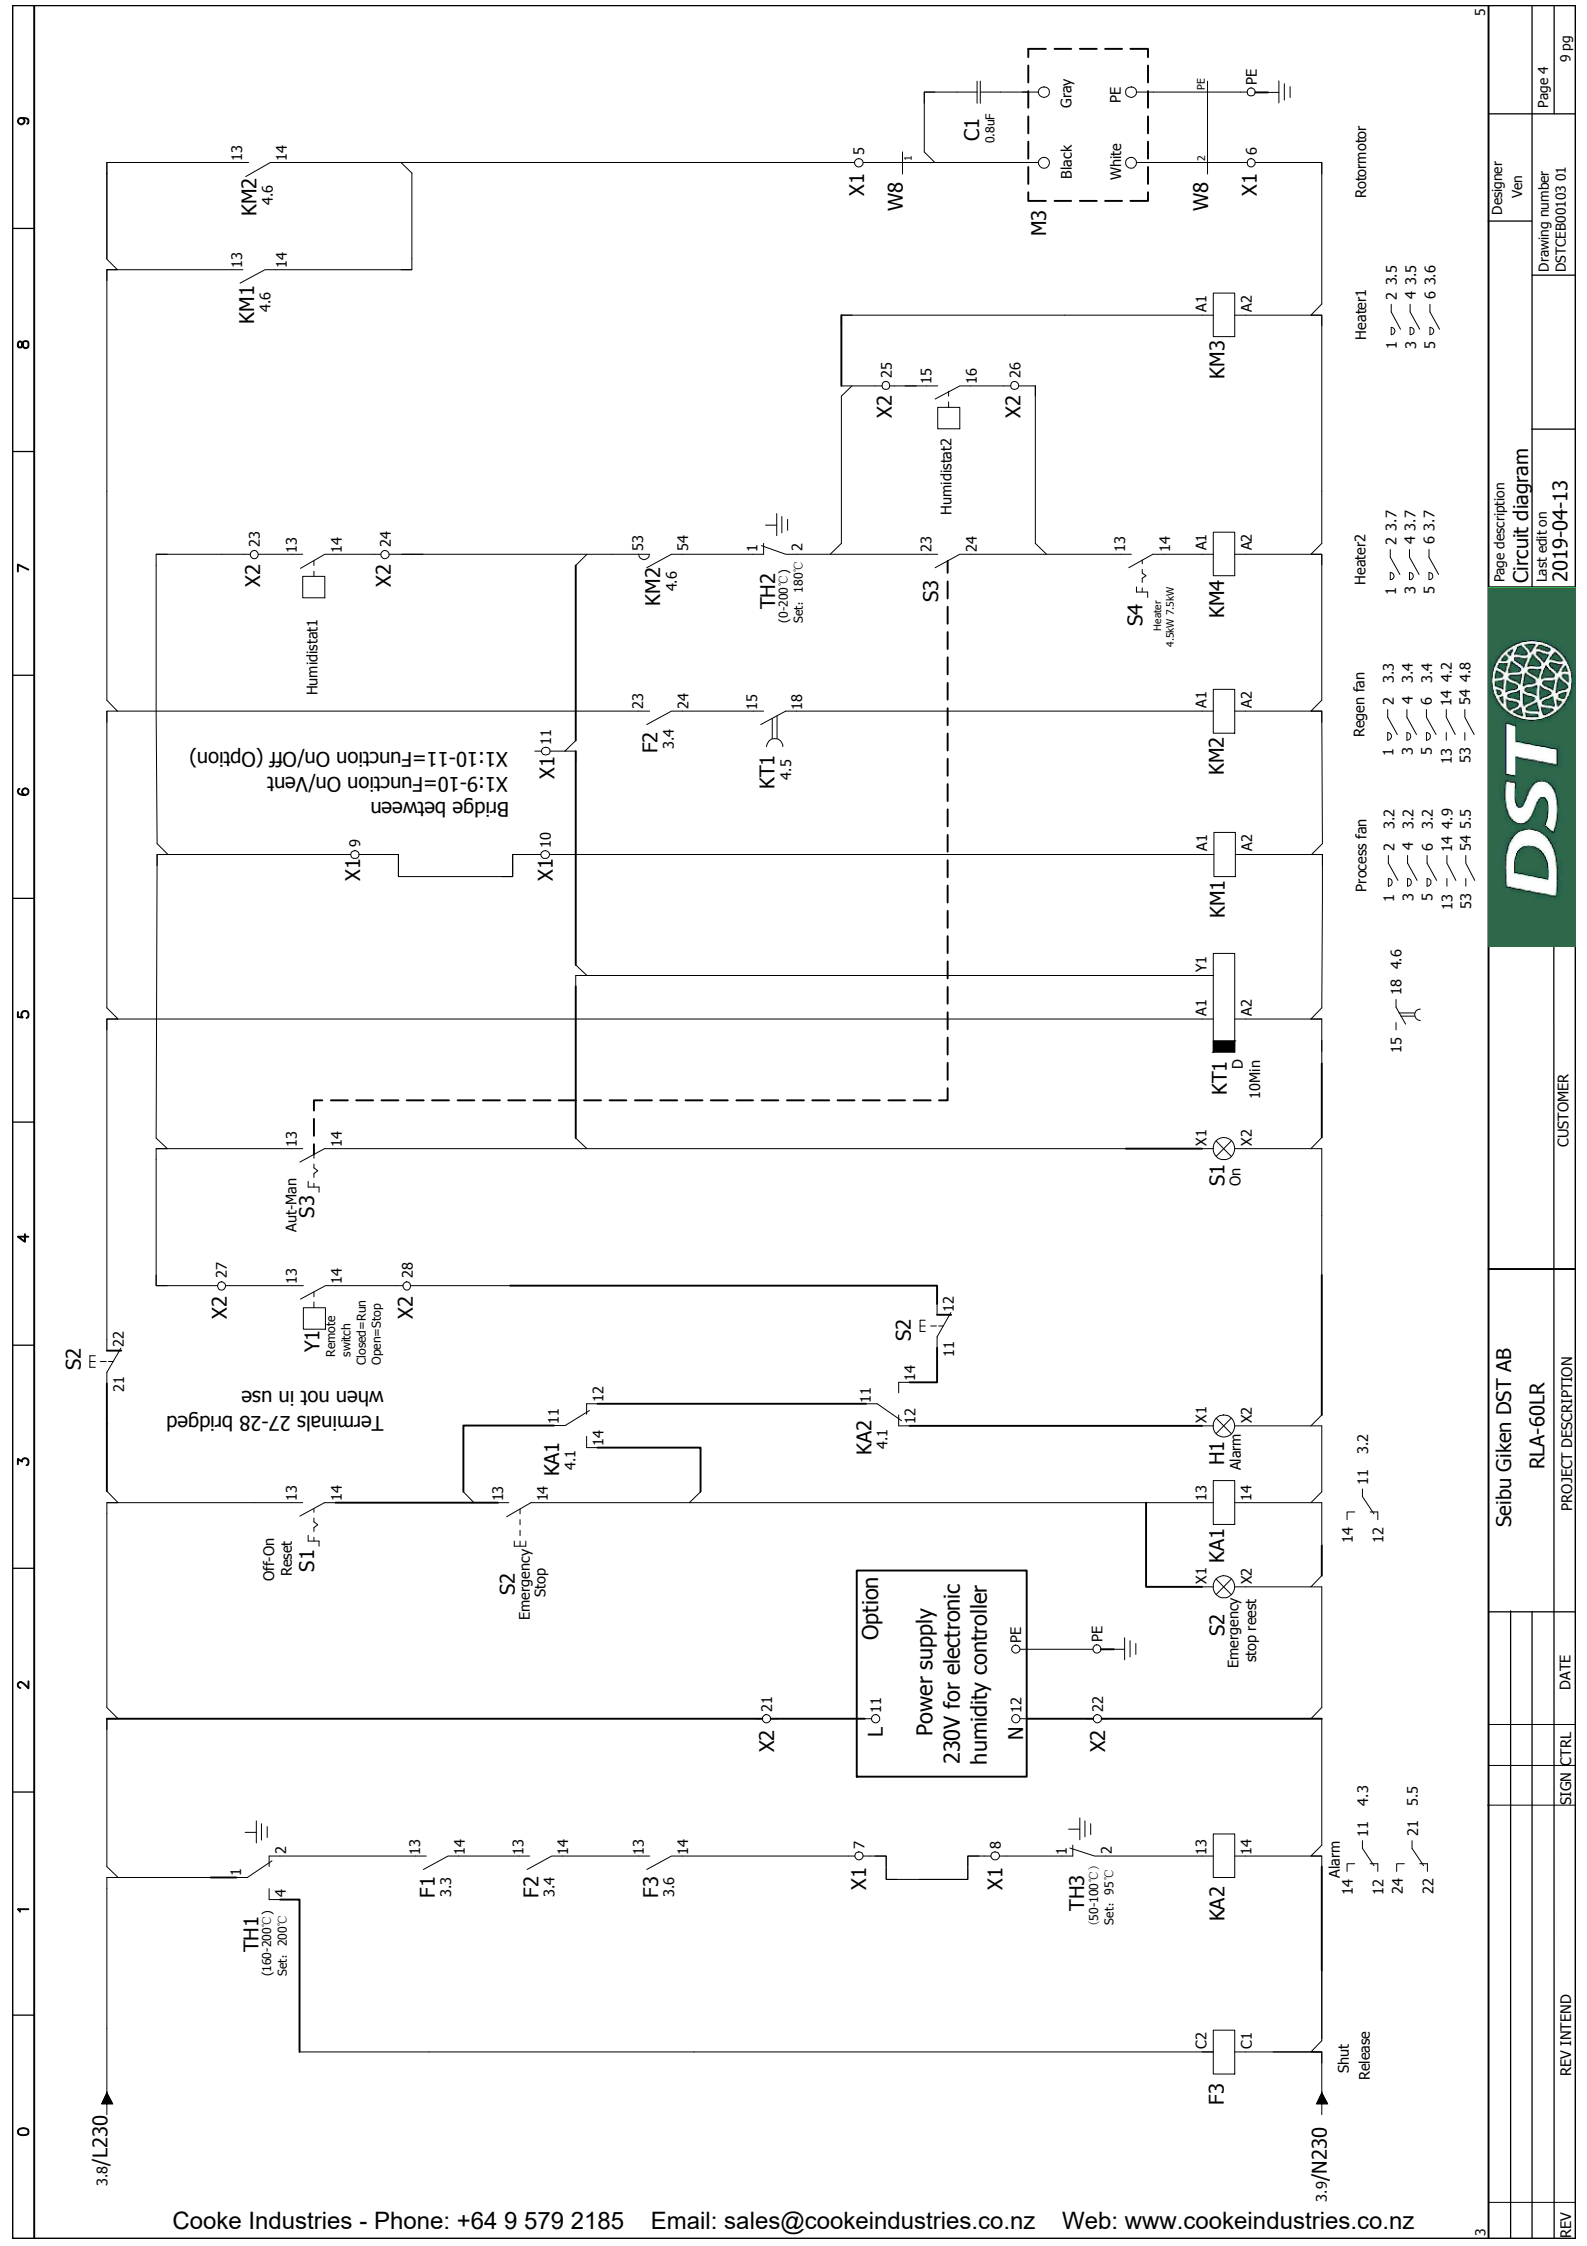

REV	REV INTEND	SIGN CTRL	DATE	PROJECT DESCRIPTION	CUSTOMER	Page description Circuit diagram Last edit on 2019-04-13	Designer Ven	Drawing number DSTCEB0103 01	Page 4 9 pg
				Seibu Giken DST AB RLA-60LR					

Alarm and run
 indication signals
 Potential free

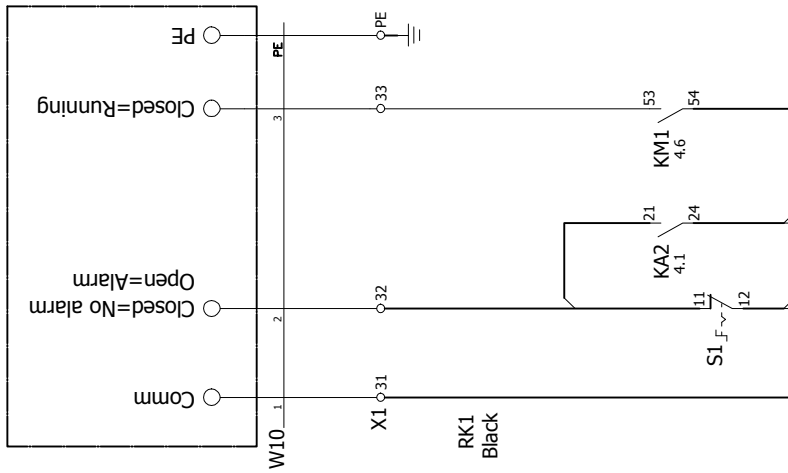



Device list

Pos	Component	Manufacturer	Model Number	Electrical	Quantity	Page
EH3/T2 (option)	Electronic humidistat	Micatrone	EH3/T2		(1)	6
F1	Circuit breaker 1~1.6A Auxiliary contact	Schneider	GV2ME06C GVAE1	1~1.6A 1NO	1 1	6 6
F2	Circuit breaker 0.63~1A Auxiliary contact	Schneider	GV2ME05C GVAE20	0.63~1A 2NO	1 1	6 6
F3	Circuit breaker C20A 3P Auxiliary contact AS	Siemens	5SY6 C20 3P 5ST3 011-0CC	5SY63207CC 2NO	1 1	4 6
F4	Shunt release TS	Siemens	5ST3 030	AC 110~415V	1	6
F5	Circuit breaker D2A 2P Circuit breaker D1A 2P	Siemens	5SY6 D2 2P 5SY6 D1 2P	5SY62028CC 5SY62018CC	1 1	4 4
H1	Red led Lamp	Schneider	XB2BVM4LC	Red	1	4
KM1-KM4	Contactor	Schneider	LC1K0910M7		4	3
KM1-KM2	Auxiliary contact	Schneider	LA1-KN11	1NO+1NC	2	3
KA1-KA2	Relay 230VAC Socket Clip Time relay	Schneider	RXM3ABIP7 RXZE2S111M RXZ400 RE17RCMU		2 2 1	6 6 6
Q0	Switch AC22/AC23 25/20A	Schneider	V0C+KCD1PZC 25A		1	3

Device list


Pos	Component	Manufacturer	Model Number	Electrical	Quantity	Page
S1	Selector switch white / lamp	Schneider	ZB5AK1213		1	6
	White led 230VAC	Schneider	ZBVM1		1	6
	Auxilliary contact 1NO	Schneider	ZBE101		1	1
	Auxilliary contact 1NC	Schneider	ZB5AZ102		1	1
S2	Illuminated Emergency stop button	Schneider	ZB5AW743		1	6
	Auxilliary contact 1NO	Schneider	ZBE101		2	1
	Auxilliary contact 1NC	Schneider	ZBE102		1	1
	Lable&Protective holder	Kacon	HP119E+KEG12Y		1	1
	Signal lamp Body + Red led	Schneider	ZB5AVM4		1	6
S3	Switch button	Schneider	XB2BD21C		1	6
	Contact	Schneider	ZB2BE101C		1	6
S4	Switch button	Schneider	XB2BD21C		1	6
T1	Transformer	Schneider	ABL6TS25U	230/400-230V 250VA	1	4
TH1	Thermostat	Jumo	602031/81 (160-200 °C)		1	6
TH2	Thermostat	Jumo	602030/02 (0-200 °C)		1	7
TH3	Thermostat	Jumo	602031/81 (50-100 °C)		1	7
X1	Terminal	Reliance	RBT 4D		6	1
	End cover	Reliance	RBP 4D/DV		1	1
	End stop screw	Reliance	VF 4/5		2	1
X2	End cover / 2.5mm ² terminal	Wago	261-361		1	1
	2-conductor terminal block Grey	Wago	261-301		11	1
	2-conductor terminal block Green/Yell	Wago	261-307		3	1
X3	End cover / 2.5mm ² terminal	Wago	261-361		1	1
	2-conductor terminal block Grey	Wago	261-301		1	1
	2-conductor terminal block Blue	Wago	261-304		1	1
	4-conductor terminal block Grey	Wago	261-331		1	1
	2-conductor terminal block Green/Yell	Wago	261-307		1	1

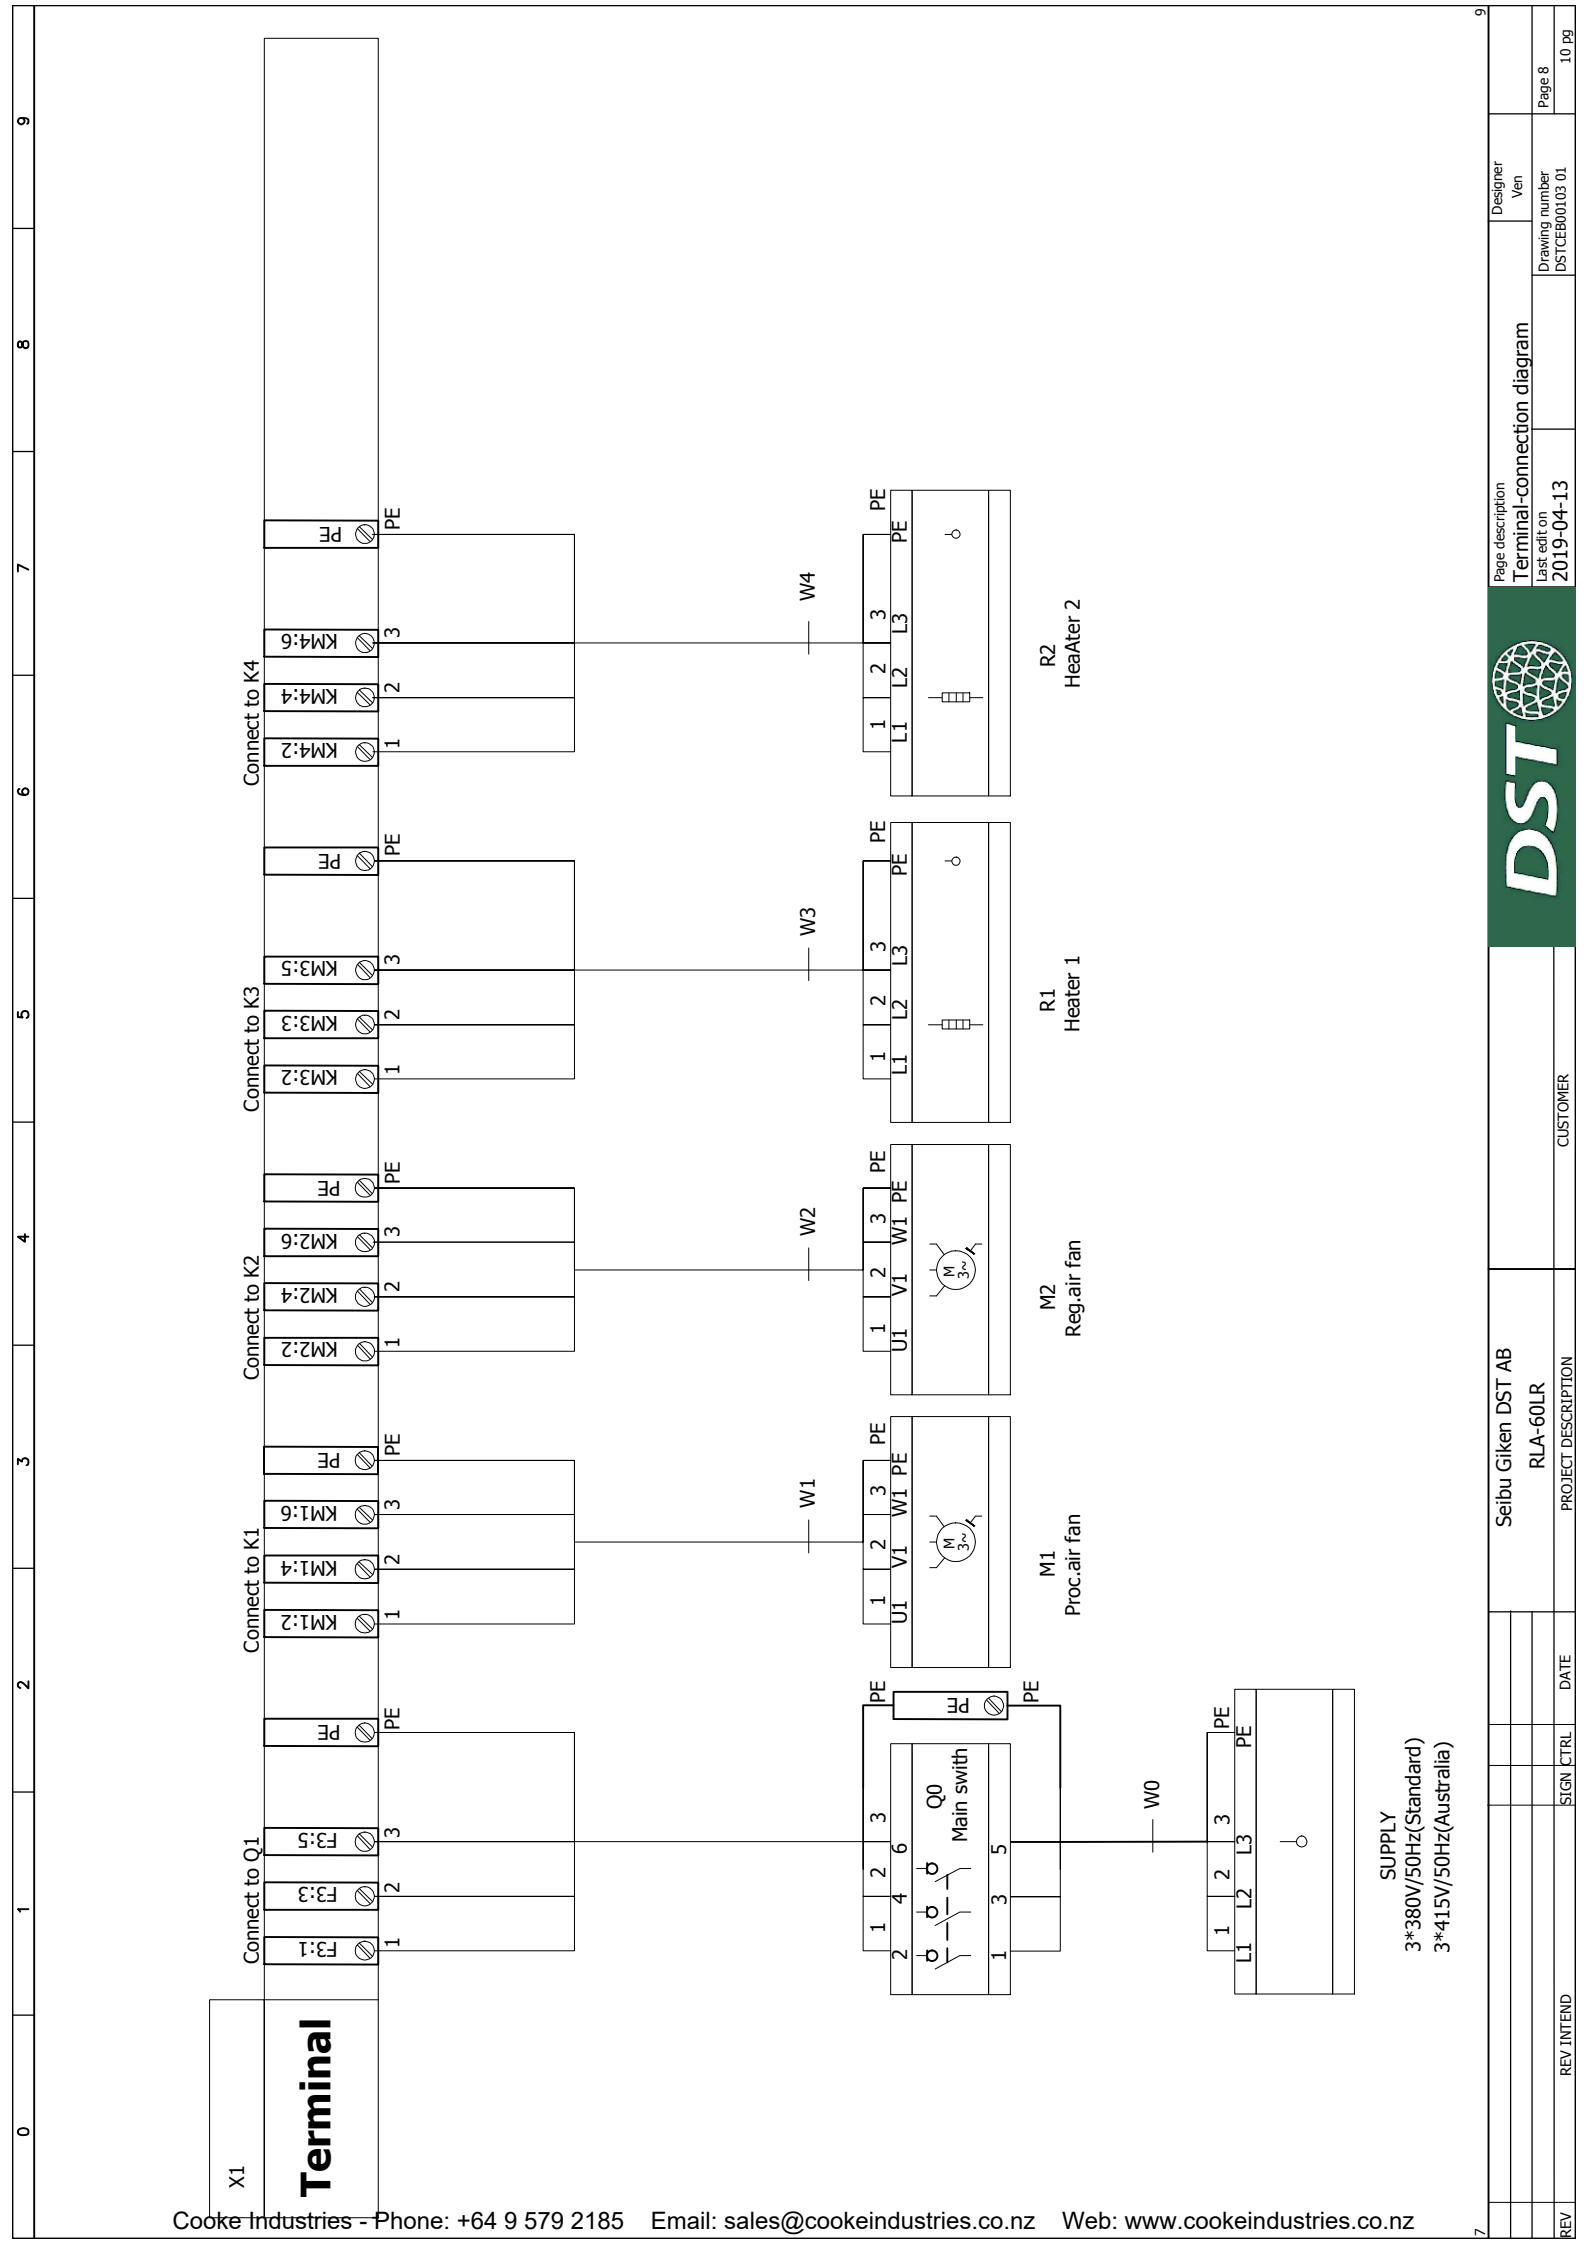

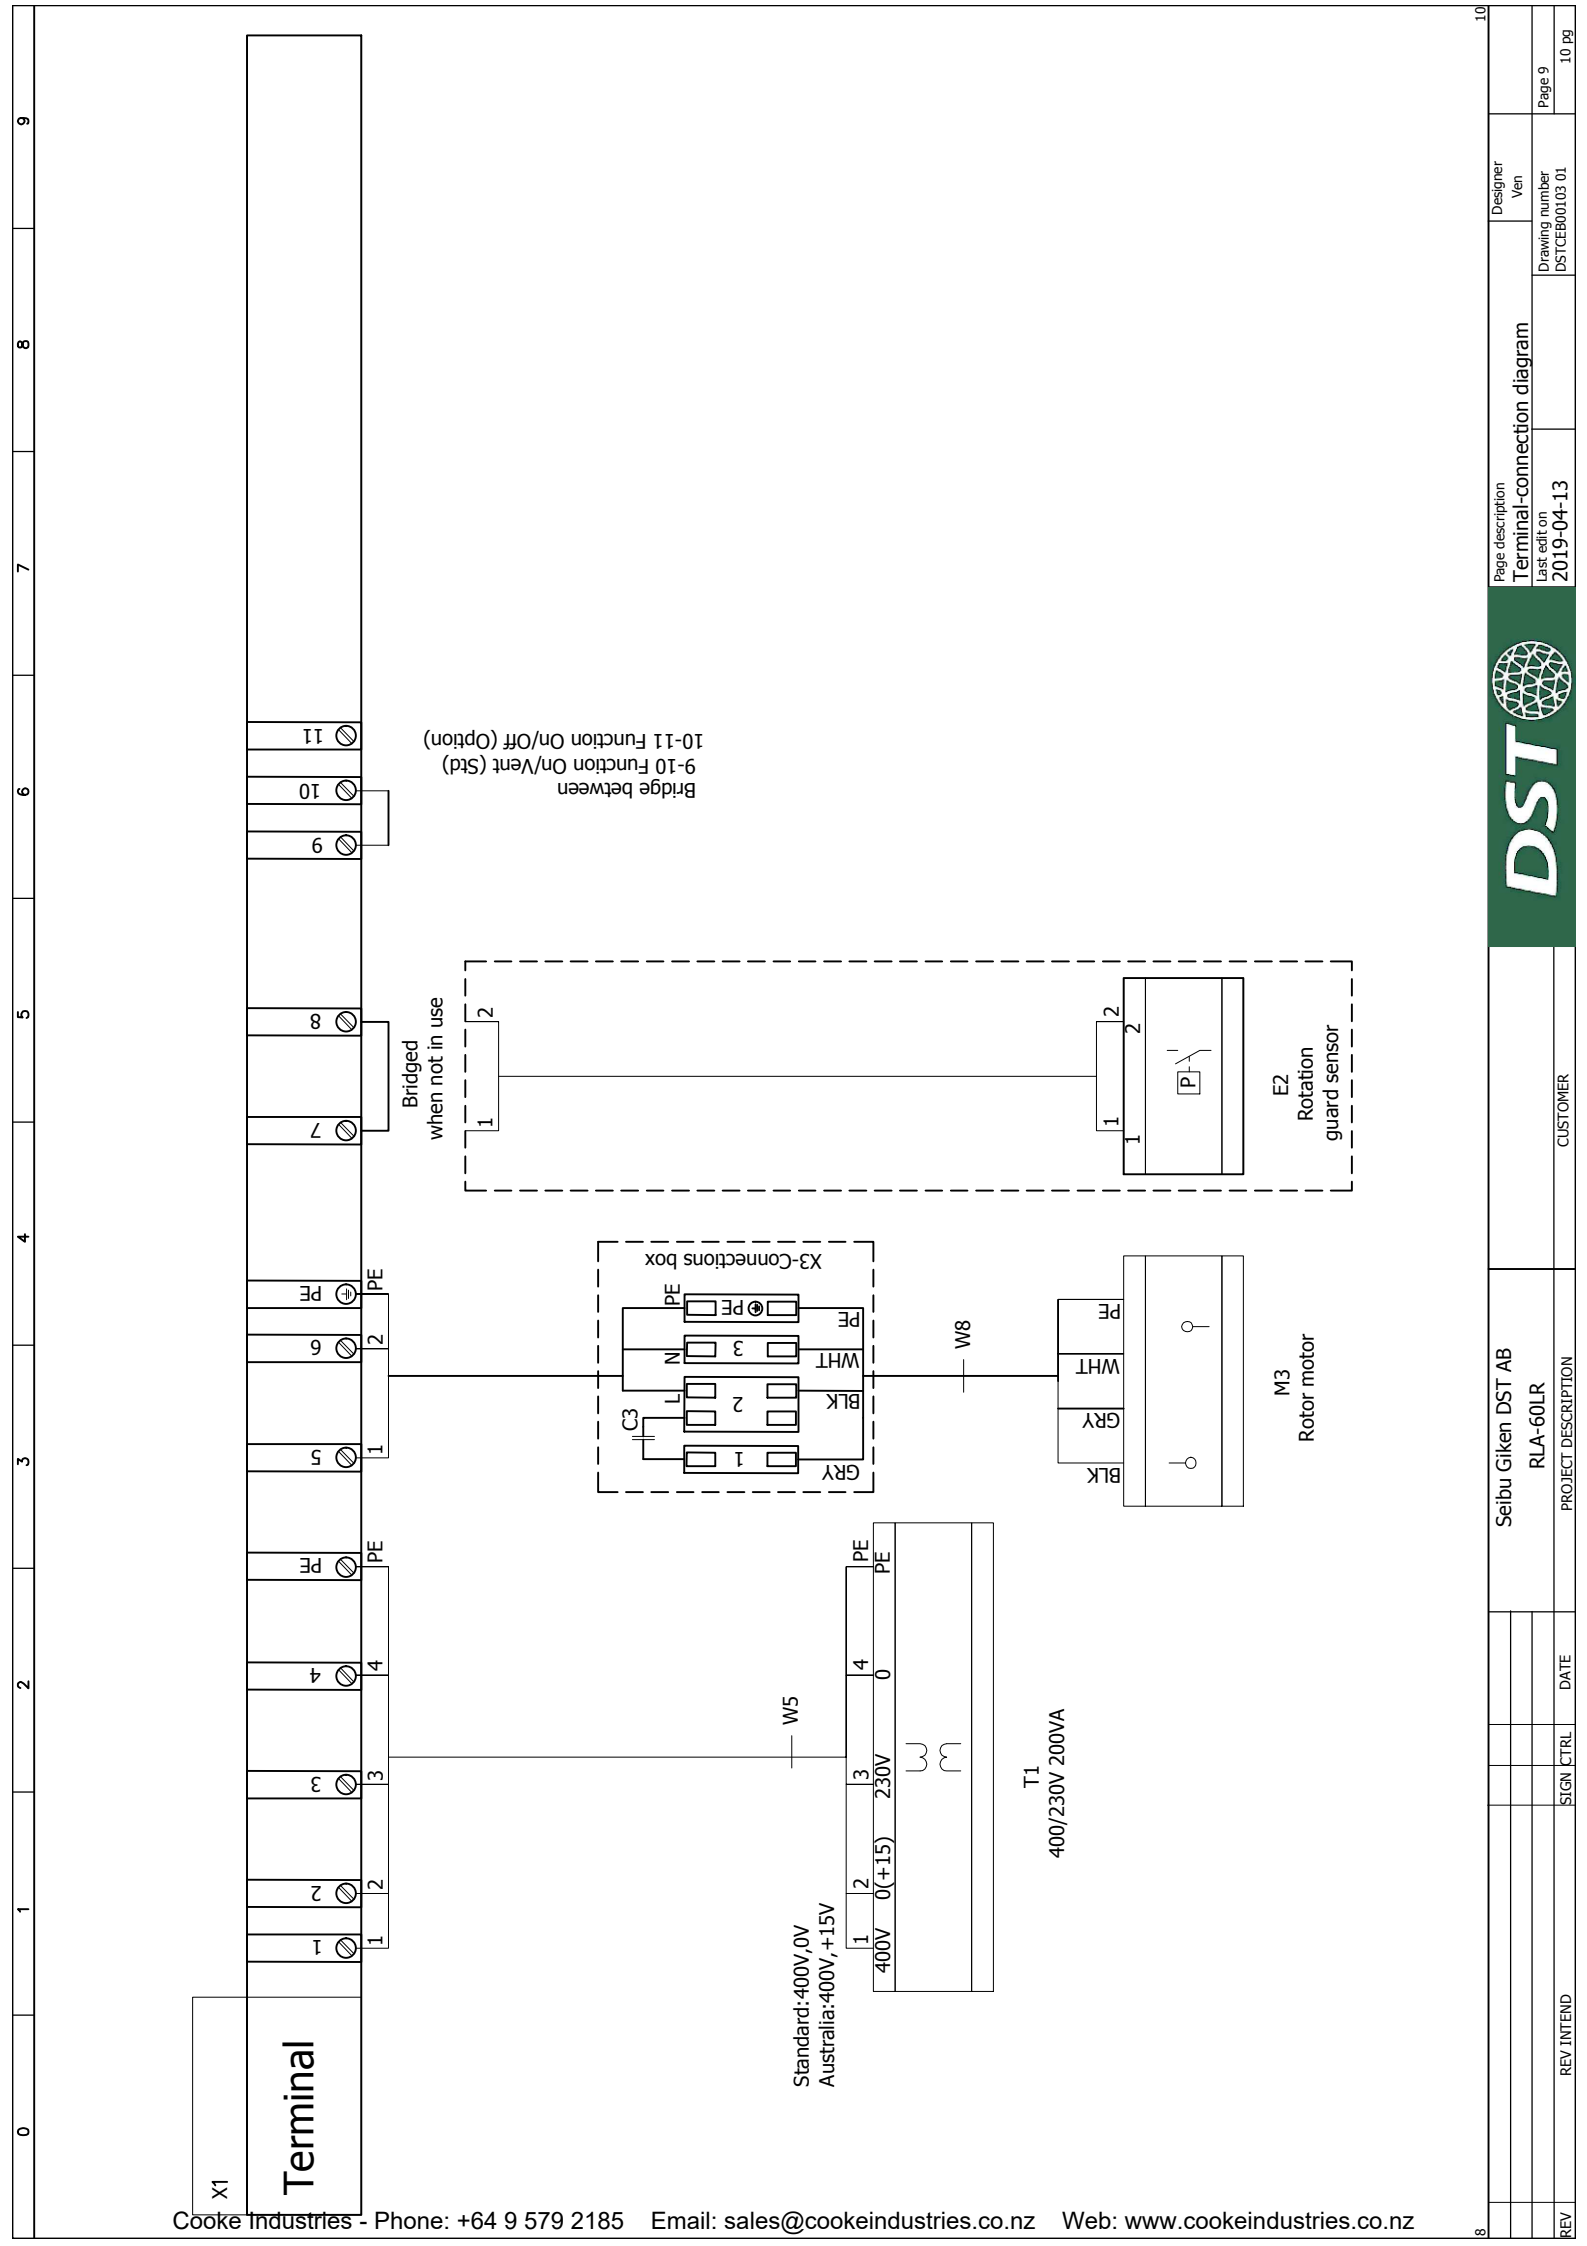

0 1 2 3 4 5 6 7 8 9

 
X1



Terminal


Bridge between
9-10 Function On/Vent (Std)
10-11 Function On/Off (Option)

Bridged
when not in use

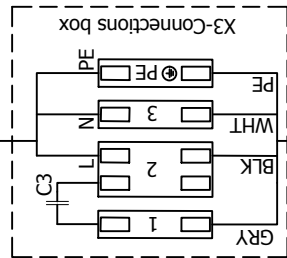


Standard: 400V, 0V
Australia: 400V, +15V

W5



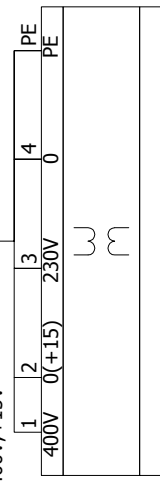


T1
400/230V 200VA

W8

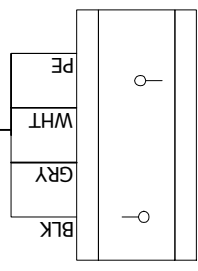

M3
Rotor motor

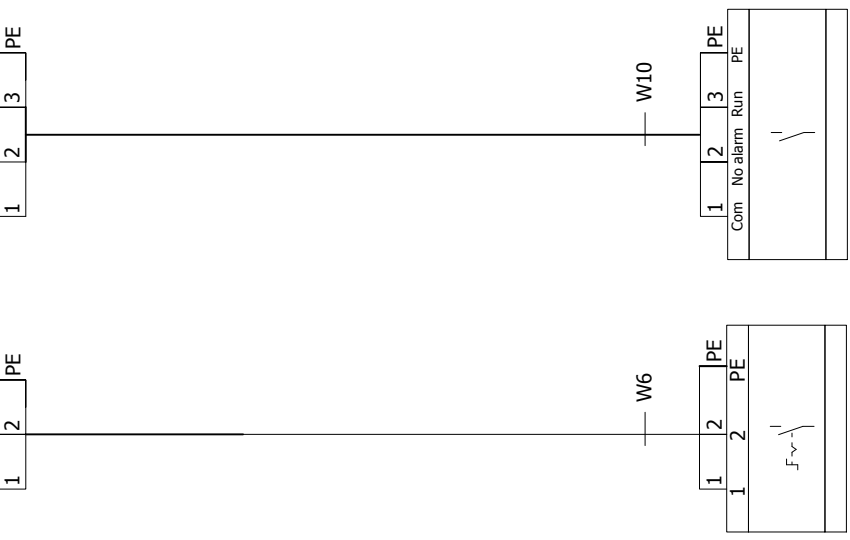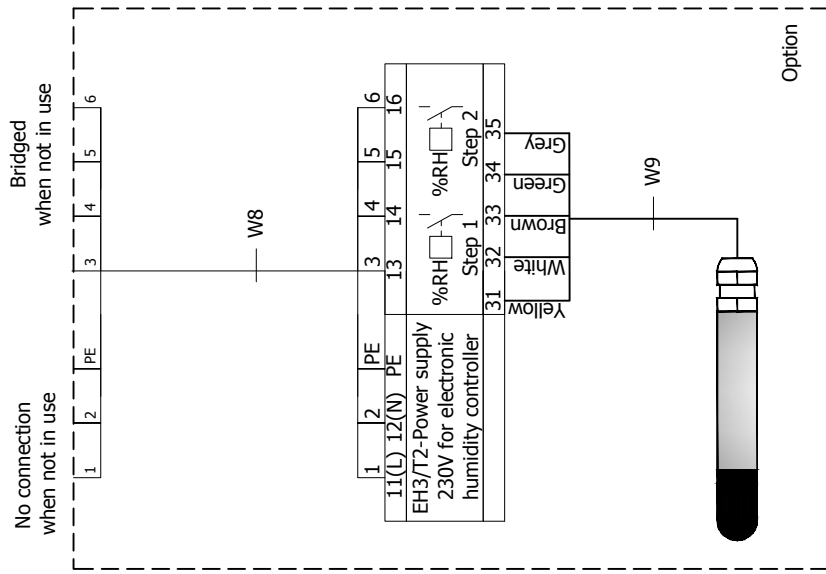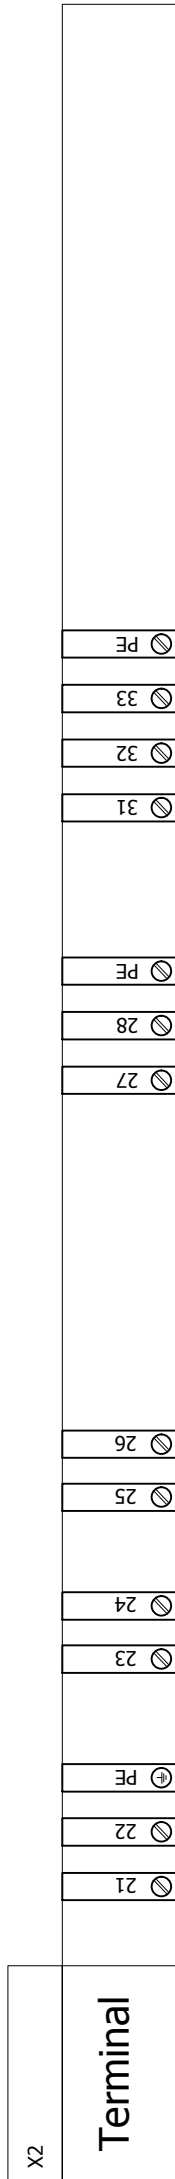

Y1 - Remote
 Close=Run
 Open=stop
 Customer connection

Alarm and run indication signals potential free
 Customer connection

Harmful chemicals and solvents for rotors

Reduced performance and/or rotor degradation is possible when adsorping the following substances.

	Substance	Note	Chemical formula	Cause
1	Oil vapor		N/A	Clogs the micro pores on the silica gel/zeolite.
2	Ammonia	2ppm and above, prolonged exposure	NH ₃	Degrades the silica gel/zeolite.
3	Amine		RNH ₂	
4	Hydrogen fluoride		HF	Corrodes the silica gel/zeolite.
5	Sodium hydroxide	High concentration	NaOH	Dissolves the silica gel/zeolite.
6	Potassium hydrate	High concentration	KOH	Clogs the micro pores on the silica gel/zeolite.
7	Lithium chloride		LiCl	
8	Sodium chloride		NaCl	
9	Potassium chloride		KCl	
10	Calcium chloride		CaCl	
11	Magnesium chloride		MgCl	
12	Aluminum chloride		AlCl ₃	
13	Seawater		N/A	
14	Strong acid	pH=3 and below	N/A	Deteriorates the honeycomb's physical structure.
15	Plasticizer		N/A	Clogs the micro pores on the silica gel/zeolite.
16	Nitrogen oxides	High concentration, excessive exposure	NO _x	Deteriorates the honeycomb's physical structure.
17	Sulfur oxides	High concentration, excessive exposure	SO _x	
18	High-temperature steam	Exposod to vapor of 100 and above.	N/A	Cracks occurs on the honyecomb.
19	Heat solubility dust		N/A	Dust covers the silica gel/zeolite surface.

There is no guarantee that other substances beyond this list may reduce the dehumidification performance or damage the silica gel/zeolite.

CE-DECLARATION (Conformité Européenne)



- | | | |
|-------------------------------------|-------------------------------------|-------------------------------------|
| 1. (S) FÖRSÄKRAN OM ÖVERENSTÄMMELSE | 6. (DE) KONFORMITÄTSEKTLÄRUNG | 11. (DE) DECLARACION DE CONFORMIDAD |
| 2. (CZ) PROHLÁŠENÍ O SHODĚ | 7. (IT) DICHIARAZIONE DI CONFORMITÀ | 12. (GB) DECLARATION OF CONFORMITY |
| 3. (DK) OPFYLDELSESERKLÆRING | 8. (NL) CONFORMITEITSVERKLARING | 13. (EE) VASTAVUSDEKLARATSIOON |
| 4. (FI) VAKUUTUS YHDENMUKAISUUDESTA | 9. (NO) SAMSVARERKLÆRING | 14. (PL) DEKLARACJA ZGODNOŚCI |
| 5. (FR) DECLARATION DE CONFORMITE | 10. (SK) VYHLÁSENIE ZHODY | 15. (PT) DECLARAÇÃO DE CONFORMIDADE |

- Härmed intygas att maskintypen:
- Tímto pohlašujeme, že zařízení typu:
- Hermed erklæres at maskintypen:
- Täten todistamme, että kojetyypit:
- Confirmons par la présente que ces matériels de type :
- Hiermit erkläre wir, dass die Maschinentypen:
- Si conferma che l'apparecchiatura modello:
- Bevestigd hierbij dat adsorptieluchtdroger type:
- Herved erklæres at maskintypen:
- Týmto prehlasujeme, že zariadenie typu:
- Confirmo que las maquinas tipo:
- Hereby confirms that machinery type:
- Käesolevaga kinnitame, et seadmed:

- Niniejszym potwierdza, że typ maszyny:
- Confirma-se, pela presente, que os tipos de máquina:

AQ-30/31	DR-50 (A)	R-51/61 (A/B/E)
CS-5/5L	DC-10	RL-60/60L/61/61L (A)
DC-5	DC-20	RL-71 (A/B/E)
DR-010B	DC-30 T10/T16	RL-71L (A)
DR-010B MH1/V3	DC-31 T10/T16	RZ-071/081/82/101/102/104 (A/B/C/D/E)
DR-20B/30D	DC-50 (A)	RLZ-82/104 (A/B/C/D/E)
DR-31 T10	F-31	CZ-082/102/102L/104 (A/B/C/D/E)
DR-40 T10/T16	R-060BR (A)	EF/FF/RF/CF-81/82/101/122/152/172/192/222/242

- är utförd i överensstämmelse med och följer följande standard(er) eller andra normgivande dokument, under förutsättning att användning sker i överensstämmelse med våra instruktioner:
- je v souladu s následujícími standardy nebo dalšími normami a předpisy při použití podle našich pokynů:
- er udført i overensstemmelse med og følger følgende standard (er) eller andre normgivende dokumenter, under forudsætning af at anvendelse sker i henhold til vore instruktioner:
- on toteutettu noudattaen seuraavaa (via) standardia (eja) tai muita ohjeellisia dokumentteja, edellyttäen, että käyttö tapahtuu meidän ohjeita noudattaen.
- sont conformes à la (aux) norme(s) suivante(s) ou autre(s) document(s) normatif(s), à condition que ceux-ci soient utilisés conformément à nos instructions
- mit den folgenden Richtlinien und Normen konform sind, wobei ein bestimmungsgemäßer Gebrauch in Übereinstimmung mit der jeweils gültigen Betriebsanleitung vorausgesetzt wird.
- è conforme alle seguenti norme armonizzate, rispettando le nostre istruzioni d'uso:
- in overeenstemming is met de volgende norm(en) en voorschrift(en),

- vooropgesteld dat deze worden toegepast/gebruikt volgens onze instructies:
- er i samsvar med følgende standard(er) eller andre normgivende dokument(er) forudsatt at anvendelse skjer i henhold til våre instruksjoner:
 - je v súlade s následujícími štandardami alebo ďalšími normami a predpismi pri použití podľa našich pokynov:
 - están en conformidad con los siguientes estándares o cualquier otra normativa documental, que indique que estos se usan de acuerdo a nuestras instrucciones:
 - are in conformity with the following standard(s) or other normative document(s), provided that these are used in accordance with our instructions.
 - vastavad järgmisele(tele) standardile(tele) või normatiividele, eeldades, et kasutamine toimub vastavalt meiepoolsetele juhistele:
 - Są w zgodności z wymaganiami normami lub innymi dokumentami normatywnymi pod warunkiem, że są one wykorzystywane zgodnie z instrukcją obsługi:
 - estão em conformidade com a(s) seguinte(s) norma(s) ou outro(s) documento(s) normativo(s), desde que estas sejam utilizadas em conformidade com as nossas instruções:

Machinery directive (2006/42/EC)
Electromagnetic compatibility (2014/30/EU)
Restriction of Hazardous Substances 2 (2011/65/EC)
Pressure equipment directive (2014/68/EU)
EN ISO 12100:2010
EN ISO 62061-1
EN 1886:2007
EN 60439-1
EN 60204-1
EN 62491



Avestagatan 33, S-163 53, SPÅNGA, Sweden

Anders Kristoferson
Managing Director
Spånga

Date

2018-03-01

(A) R - Resistive electric heater (D) O - Oil heater
(B) S - Steam heater (E) HW/WW - Hot/warm water heater
(C) G - Gas heater



Seibu Giken DST AB

Avestagatan 33 | SE-163 53 Spånga, Sweden

Tel. +46 8 445 77 20 | Fax +46 8 445 77 39

www.dst-sg.com | info@dst-sg.com

